


c. Kung Fu Master

COMPONENT SIDE	PIN NUMBERS		SOLDER SIDE
GROUND	1	2	GROUND
GROUND	3	4	GROUND
	5	6	
COIN COUNTER A	7	8	
1P CONTROL LEFT	9	10	2P CONTROL LEFT
1P CONTROL RIGHT	11	12	2P CONTROL RIGHT
1P CONTROL PUNCH	13	14	2P CONTROL PUNCH
1 PLAYER START	15	16	2 PLAYER START
	17	18	COIN COUNTER B
COIN SWITCH B	19	20	VIDEO SYNC
+ 12 VOLTS	21	22	+ 12 VOLTS
+ 12 VOLTS	23	24	+ 12 VOLTS
SPEAKER (-)	25	26	SPEAKER (+)
1P CONTROL KICK	27	28	2P CONTROL KICK
VIDEO RED	29	30	VIDEO GREEN
VIDEO BLUE	31	32	
2P CONTROL UP	33	34	2P CONTROL DOWN
1P CONTROL UP	35	36	1P CONTROL DOWN
SERVICE SWITCH	37	38	COIN SWITCH A
+ 5 VOLTS	39	40	+ 5 VOLTS
+ 5 VOLTS	41	42	+ 5 VOLTS
GROUND	43	44	GROUND

HARNESS CONNECTOR, EMI FILTER PCB

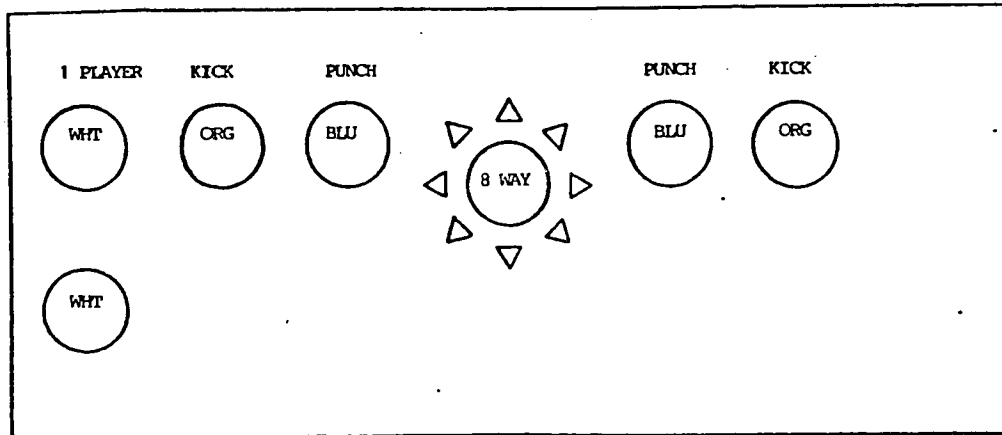

CONTROL PANEL LAYOUT

c. Kung Fu Master (continued)

OPTION TABLES

DIPSWITCH 1		1	2	3	4	5	6	7	8
DIFFICULTY	NORMAL:	OFF							
	HARD:	ON							
DECREASE OF ENERGY	NORMAL:	OFF							
	FAST:	ON							
NUMBER OF LIVES	THREE:			OFF	OFF				
	TWO:			ON	OFF				
	FOUR:			OFF	ON				
	FIVE:			ON	ON				
COIN OPTIONS	1 COIN=1 PLAY:					OFF	OFF	OFF	OFF
	2 COIN=1 PLAY:					ON	OFF	OFF	OFF
	3 COIN=1 PLAY:					OFF	ON	OFF	OFF
	4 COIN=1 PLAY:					ON	ON	OFF	OFF
	5 COIN=1 PLAY:					OFF	OFF	ON	OFF
	6 COIN=1 PLAY:					ON	OFF	ON	OFF
SW3 OF DIPSW 2 MUST BE OFF	1 COIN=2 PLAY:					OFF	OFF	OFF	ON
	1 COIN=3 PLAY:					ON	OFF	OFF	ON
	1 COIN=4 PLAY:					OFF	ON	OFF	ON
	1 COIN=5 PLAY:					ON	ON	OFF	ON
	1 COIN=6 PLAY:					OFF	OFF	ON	ON
	FREE PLAY:					ON	ON	ON	ON

DIPSWITCH 2		1	2	3	4	5	6	7	8	
FLIP PICTURE	NO:	OFF								
	YES:	ON								
CABINET TYPE	TABLE:	OFF								
	UPRIGHT:	ON								
MUST BE OFF				OFF	OFF	OFF				
FREEZE PICTURE MODE *	NO:					OFF				
	YES:					ON				
NO DEATH MODE	NO:								OFF	
	YES:								ON	
DIAGNOSTIC TEST MODE	NO:								OFF	
	YES:								ON	

* PRESS 2 PLAYER START BUTTON TO FREEZE PICTURE. PRESS 1 PLAYER START BUTTON TO CONTINUE.