



# Blockade

**PART NO.  
707-0001**

MANUFACTURED BY



# OWNER'S MANUAL

**BLOCKADE  
OPERATING INSTRUCTIONS  
AND  
SERVICE MANUAL**

**GREMLIN INDUSTRIES, INC.  
8401 Aero Drive  
San Diego, CA. 92123**

TABLE OF CONTENTS

Introduction . . . . .	Page 1
Warranty . . . . .	Page 3
Uncrating and Inspection . . . . .	Page 4
BLOCKADE Description . . . . .	Page 6
System Description . . . . .	Page 8
Maintenance . . . . .	Page 10
Maintenance Procedures . . . . .	Page 11
Schematics and Parts List . . . . .	Following Pages

## INTRODUCTION

BLOCKADE is an electronic game that makes extensive use of digital integrated circuitry and television monitor circuitry. This manual assumes the maintenance technician possesses a general knowledge of solid state circuitry, TTL digital integrated circuitry and T.V. monitor concepts. Any individual NOT knowledgeable in these area SHOULD NOT attempt repair of the electronic portion of this game. IT SHOULD BE NOTED THAT ANY ATTEMPT TO REPAIR THE GAME IN THE FIELD WITHOUT THE EXPRESS CONSENT OF THE FACTORY WILL IMMEDIATELY VOID THE WARRANTY!!

### IMPORTANT NOTES:

- NEVER replace any components with anything other than exact replacement parts. (See Parts List located on Service Schematics.)
- NEVER remove circuit boards/connections while power is on.
- DO NOT replace the fuse with anything other than the proper value. A blown fuse indicates an overload condition within the game. Replacing the fuse with a higher value can cause severe damage to internal components if an overload occurs.
- ALWAYS consult the manual before attempting repairs.
- CORRESPONDENCE regarding this game should be addressed to:

GREMLIN INDUSTRIES, INC.  
8401 Aero Drive  
San Diego, California 92123  
(714) 277-8700

## NOTE

An important service note is posted in the BLOCKADE game and is repeated here for emphasis:

**IF AT ANY TIME THE T.V. SCREEN SHOWS A MEANINGLESS DISPLAY OR THE GAME OTHERWISE MALFUNCTIONS, SIMPLY DROP A COIN INTO THE COIN MECHANISM. THIS SHOULD CORRECT THE PROBLEM. IF NOT, THE GAME REQUIRES SERVICE.**

The circuitry in BLOCKADE has been arranged so that the insertion of a quarter thru the coin mechanism will reset the restart in the system. This clears up temporary problems caused by power line disturbances, static, etc.

### **SERVICE TECHNICIAN NOTE:**

The system reset circuitry described above requires that the coin counter is attached to the system. If there is a coin counter problem and no replacement is available, the game will function properly if a 10K Ohm resistor is connected across the coin counter input pins to the video logic board.

## WARRANTY/FACTORY SERVICE INFORMATION

### WARRANTY

BLOCKADE is under factory warranty (Parts and Labor) for the following time periods:

- A. All electronic components/connectors for one (1) year except:
  - 1. Transformers - 90 days.
  - 2. Fuses/Lamps - No Warranty

This Warranty covers defects/failure under normal use.

Should an assembly become defective, contact your local distributor. Factory authorization to return the assembly will be issued with transportation charges prepaid. If decided upon by factory representative an advance replacement will be made.

The assembly will be repaired and returned, transportation charges prepaid, if still in Warranty and no advance replacement made.

If the assembly is found to be damaged by misuse, improper attempts at repair, or abuse, it will be repaired and returned with transportation and repair charges billed.

Out of Warranty assemblies, if returned to the factory with transportation charges prepaid, will be repaired and returned with transportation and repair charges billed.

In the instance of a defect of an assembly manufactured by other than GREMLIN INDUSTRIES, INC., every effort will be made to assist the customer in obtaining satisfaction from the original manufacturer.


**UNCRATING AND SET-UP INSTRUCTIONS**  
**"BLOCKADE VIDEO GAME"**

**NOTE:** During the entire uncrating and setting up of this game, a continual inspection should be carried out for cabinet damage and/or any other damage to electronic and mechanical hardware.

The following steps should be taken in uncrating and setting up of this game: (See diagram Page 5.)

- A. Remove all strapping (ref. 1)
- B. Remove top lid of container (ref. 2)
- C. Remove staples on vertical overlap portion of container before removing from cabinet. (ref. 3)
- D. Before removing the four corner pads that are taped to cabinet, (ref. 4), carefully lay the cabinet on either of two sides and remove the skid bolts (ref. 5) and skid (ref. 6) and discard.
- E. Remove keys (ref. 9) from packet and unlock coin door, then remove shipping screw (ref. 7) from inside of coin box and discard.
- F. Use key (ref. 9) to unlock back panel. After panel has been removed, inspect all electrical and other hardware for damage.
- G. If damage has occurred during shipment, the recipient should immediately file a Damage Claim with the carrier.
- H. Power Specifications:  
AC, 100V-115V-230V, 50/60Hz, 130 W, 3-Wire Cord with safety interlock on the rear game access door; NOTE - grounding is required.

# UNCRATING INSTRUCTIONS BLOCKADE

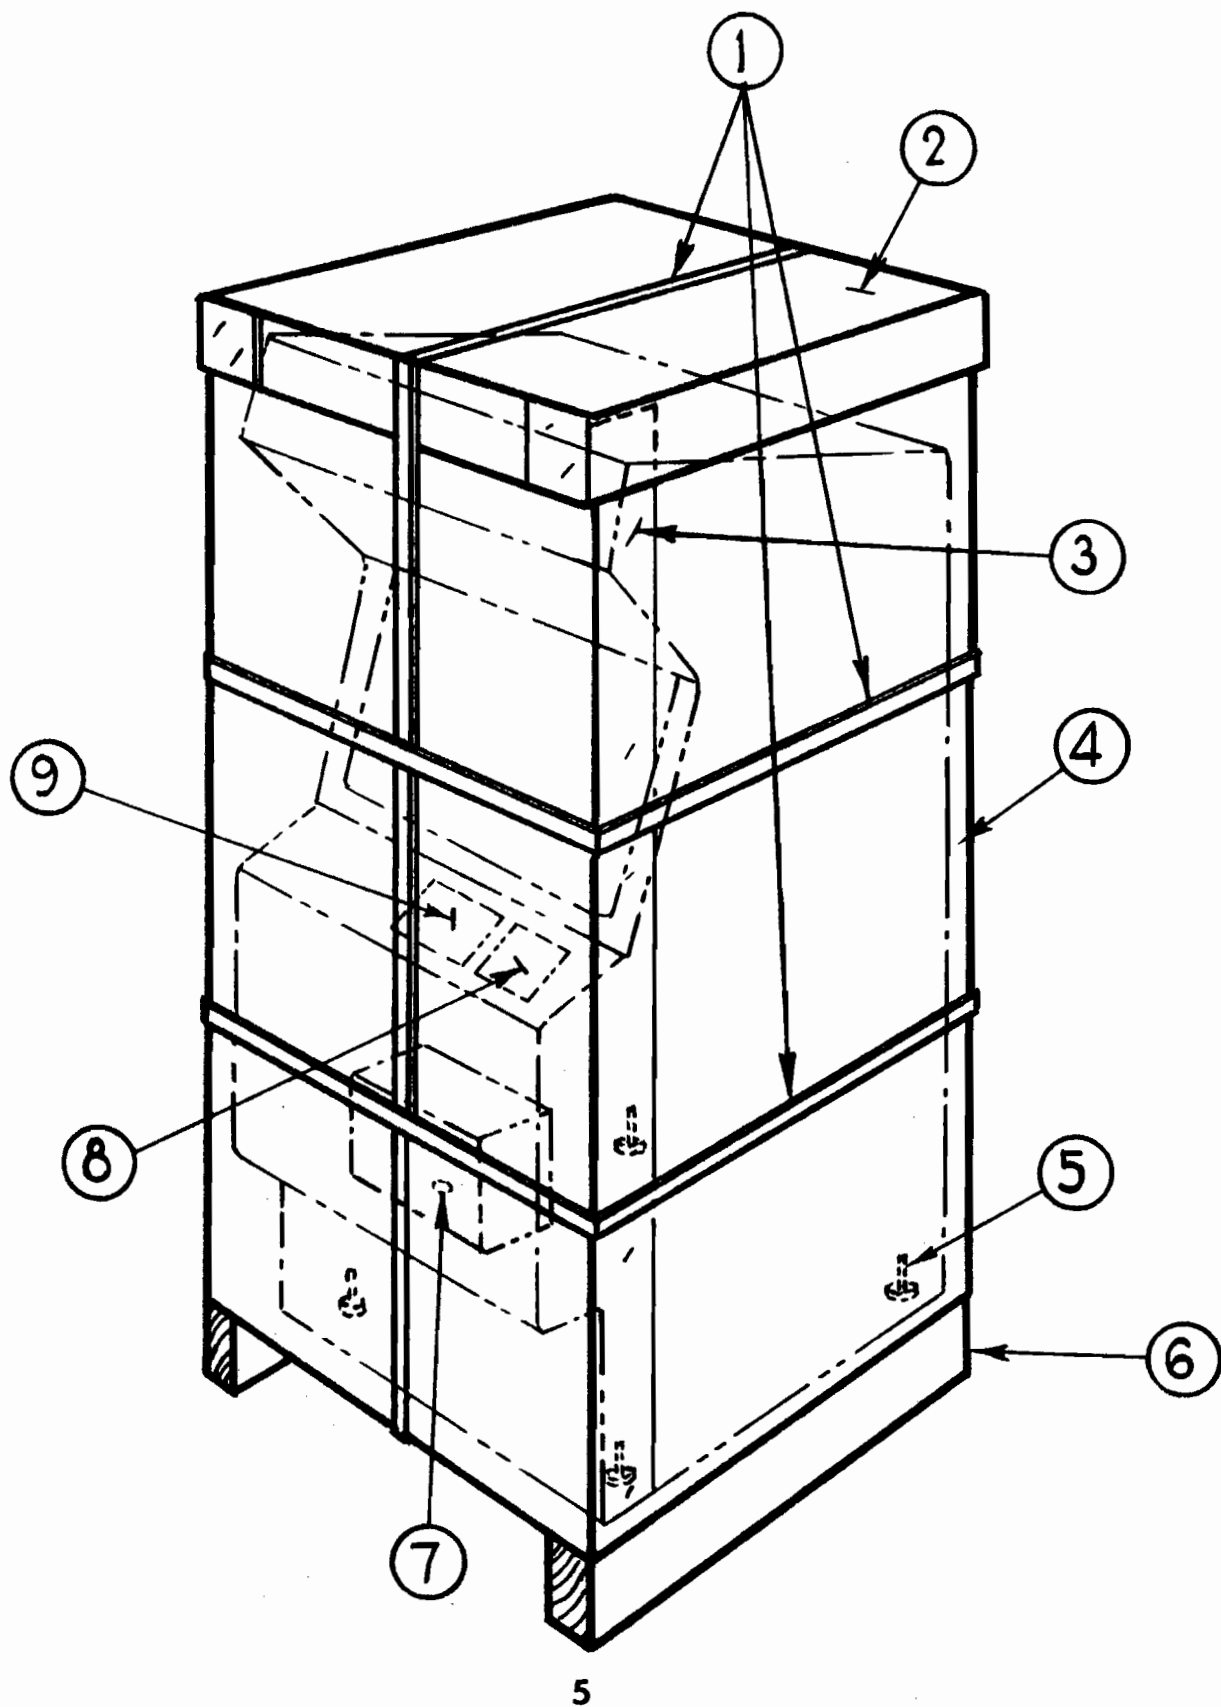



## BLOCKADE

### 1. GAME CONCEPT -

BLOCKADE is a two player game in which each player controls the direction of an arrow moving on the face of a video display. The perimeter of the display is a barrier, constructed of images which resemble blocks.

Each player utilizes a set of push button controls to change the direction of his moving arrow. As it moves, the arrow leaves a "trail" of block images, which form a continuous wall or barrier.

Anytime a player's arrow collides with a wall, there is an audible explosion and accompanying flashing symbol at the point of impact. A point is awarded to your opponent when your arrow enters an already occupied space (i.e.):

1. the block barrier created by either player
2. the perimeter walls
3. the opponent's arrow
4. reverse direction of your own arrow

After a pre-set number of crashes by either player, the game ends. Example: If the game were set to end after five crashes, the first player to crash five times loses the game.

### 2. OPERATION -

The arrows move alternately at a fixed rate, approximately two times per second. To change direction of his arrow, a player momentarily presses the push button required for a left or right turn relative to his direction of travel. The arrow will move in the new direction until changed again. A player's reaction time is important as turns must be made at precise moments during the play.

As the arrows move, a series of tones are audible. Every direction for each arrow generates a different pitch (eight in all). The result is an audible change whenever either player makes a turn.

After each collision, the players' scores are briefly displayed. If the game has not been won, all obstacles except the perimeter walls are cleared, and the next segment of the game begins.

Whenever BLOCKADE is not being played, an "advertisement sequence is initiated. The game plays itself to attract attention. To avoid patron confusion, the words "Game Over" appear while the advertising game is being played, and during a forty second delay thereafter. Following the delay, the advertising sequence repeats.

E-Z Adjust<sup>TM</sup> Control Panel - BLOCKADE has three adjustments, all of which are located on the back of the coin door. These three controls are:

1. VOLUME CONTROL -  
Set to desired volume for boom and tones during the game. This also effects advertising boom volume if boom switch is "ON".
2. BOOM SWITCH -  
Switch to "ON" position if boom is desired during advertising.
3. GAME END SWITCH -  
Switch to desired game ending score. (3-4-5- or 6)



## SYSTEM DESCRIPTION

1. SEE SYSTEM BLOCK DIAGRAM (Fig. 1)

2. MICROPROCESSOR -

The game microprocessor is a Model 8080A and it functions as the Central Processing Unit (CPU) in the system. The CPU (1) is synchronized by a clock circuit which provides frequencies required by the CPU and the Video Timing Logic (14).


Address Bus (4) selects the memory addresses to be accessed by the CPU. It is routed to three subsystems:

1. Read Write Memory (6): A random Access Memory (Ram) used to form a first in/last out (stack) memory. Used to perform sub-routine calls and returns, also used for temporary data storage during program execution.
2. Read Only Memory (Rom) (7): Stores program instructions for the CPU.
3. Address Multiplexer (8): Selects either CPU addresses or addresses from the Video Timing Logic. Used to address the Video Refresh Memory (9).

Data Bus (5) carries data to and from the CPU. It receives data from Read Write Memory, Read Only Memory, Video Refresh Memory and Input Ports (12). The Bus transmits data to Read Write Memory, Output Ports and Video Refresh Memory. The Input Ports accept player control data (19). The Output Port (13) initiates sound control and activates any external logic and indicators needed by the game.

Timing and Control Logic (11) generates synchronizing signals to keep system operation synchronized to the CPU. It controls:

1. Memory Read
2. Memory Write
3. Input Port Read
4. Output Port Write

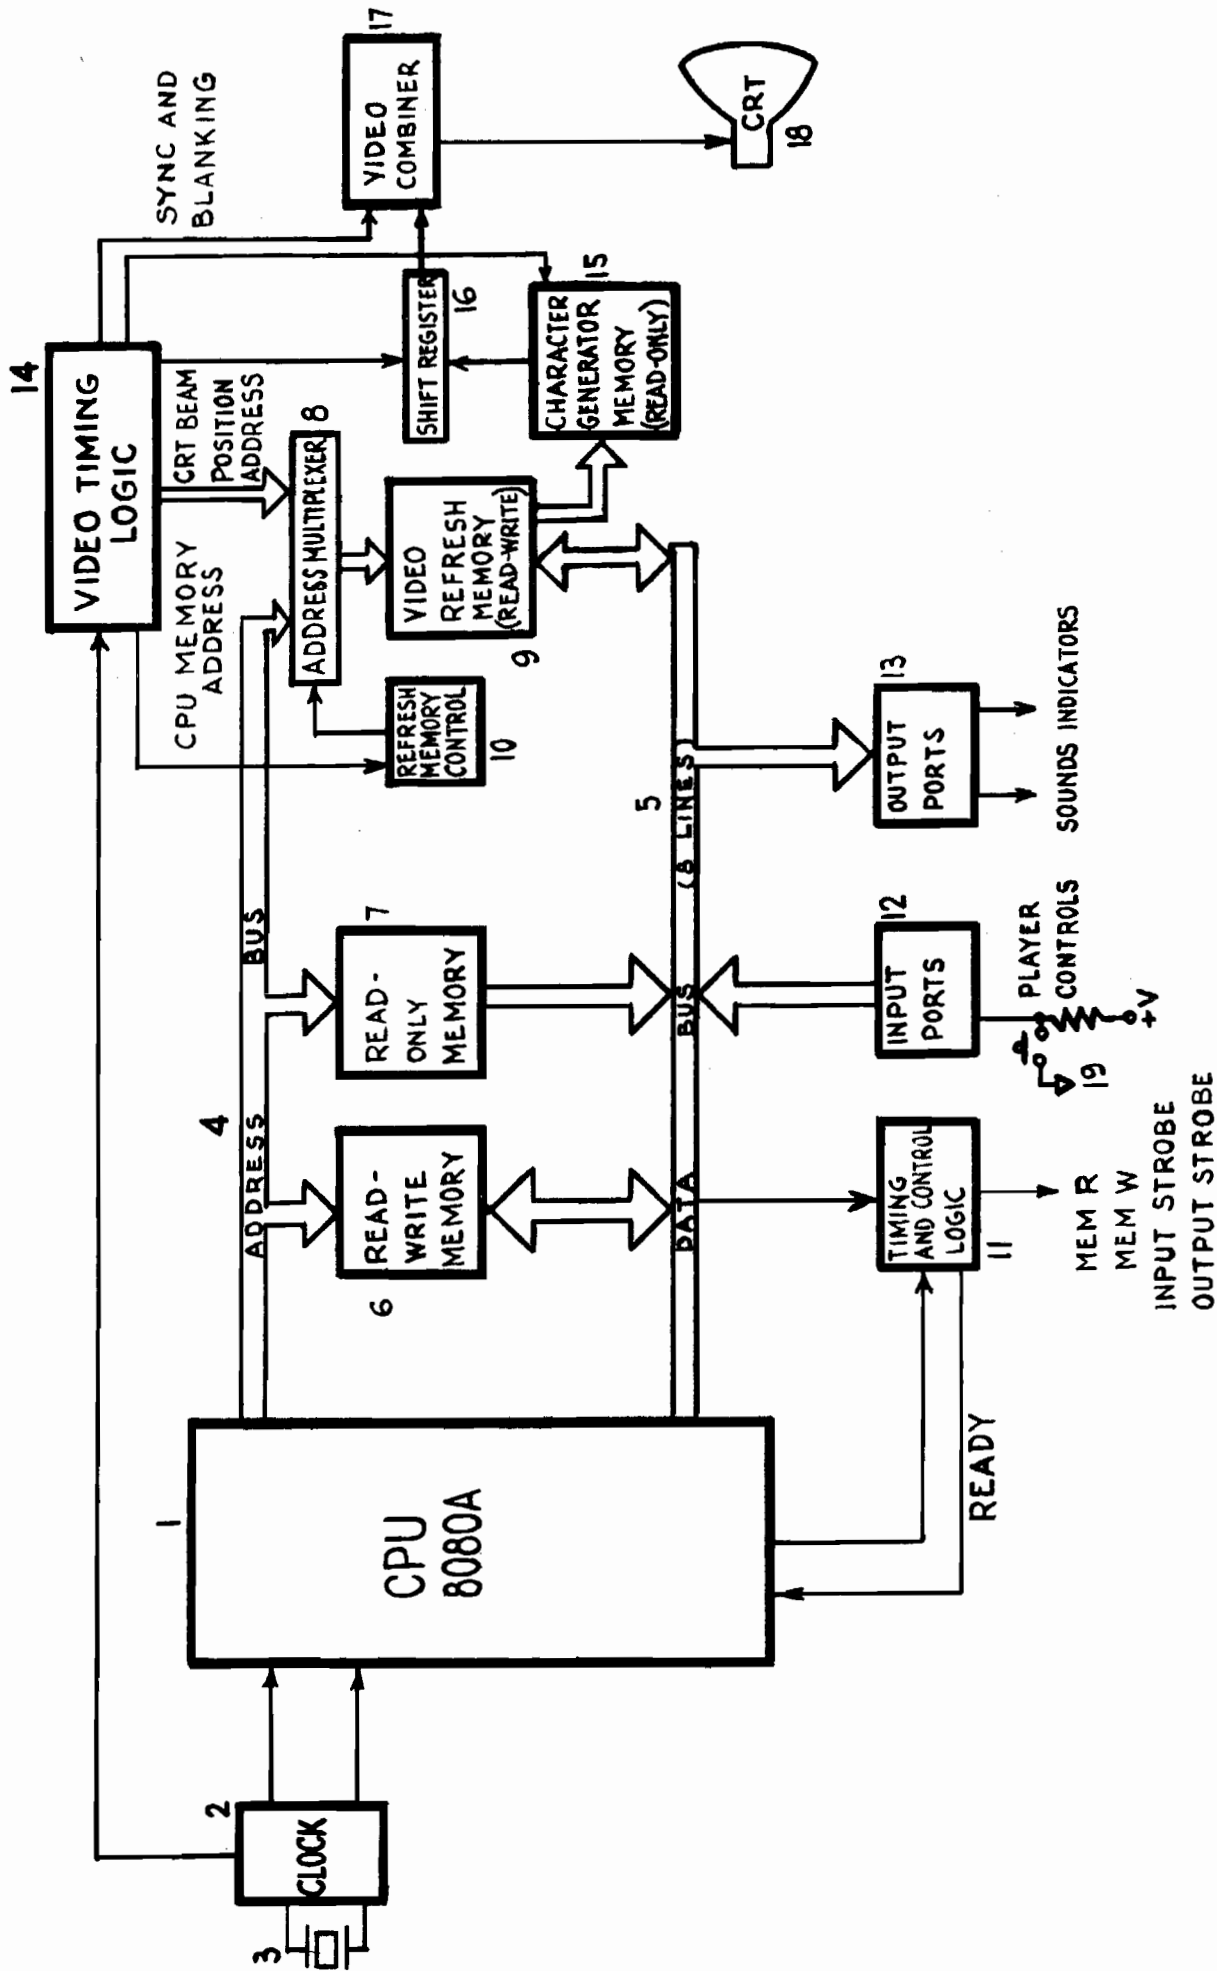

SYSTEM BLOCK DIAGRAM

FIG 1

The remaining elements in Figure 1 convert (CPU) system information into a video display format. The T.V. monitor (18) uses a standard 525 scan line system.

Video Refresh Memory (9) stores information from the CPU which is read out as the CRT beam sweeps across the screen. It is addressed from two sources as controlled by Address Multiplexer (8). During vertical sweep retrace of the CRT, the Video Refresh Memory is addressed by the CPU so information can be updated. During scan time, Video Refresh Memory is addressed by Video Timing Logic (14). Refresh Memory Control (10) insures that address demands from Video Timing Logic and the CPU never occur simultaneously.

Character Generator Memory (15) provides a means for Video Refresh Memory to select 64 dots for each 8 word access. Each image, on the display, will have the dimensions of 8 dots high, and 8 dots wide. Shift register (16) develops this into a video signal. (see Figure 2)

A Tone Generator is driven by Output Ports (13). The CPU controls the frequency of the tone by loading a number (0-255) into the Output Ports (13). A direction change by a player will cause the CPU to load a different number into the Output Port, changing the tone. (see Figure 3)


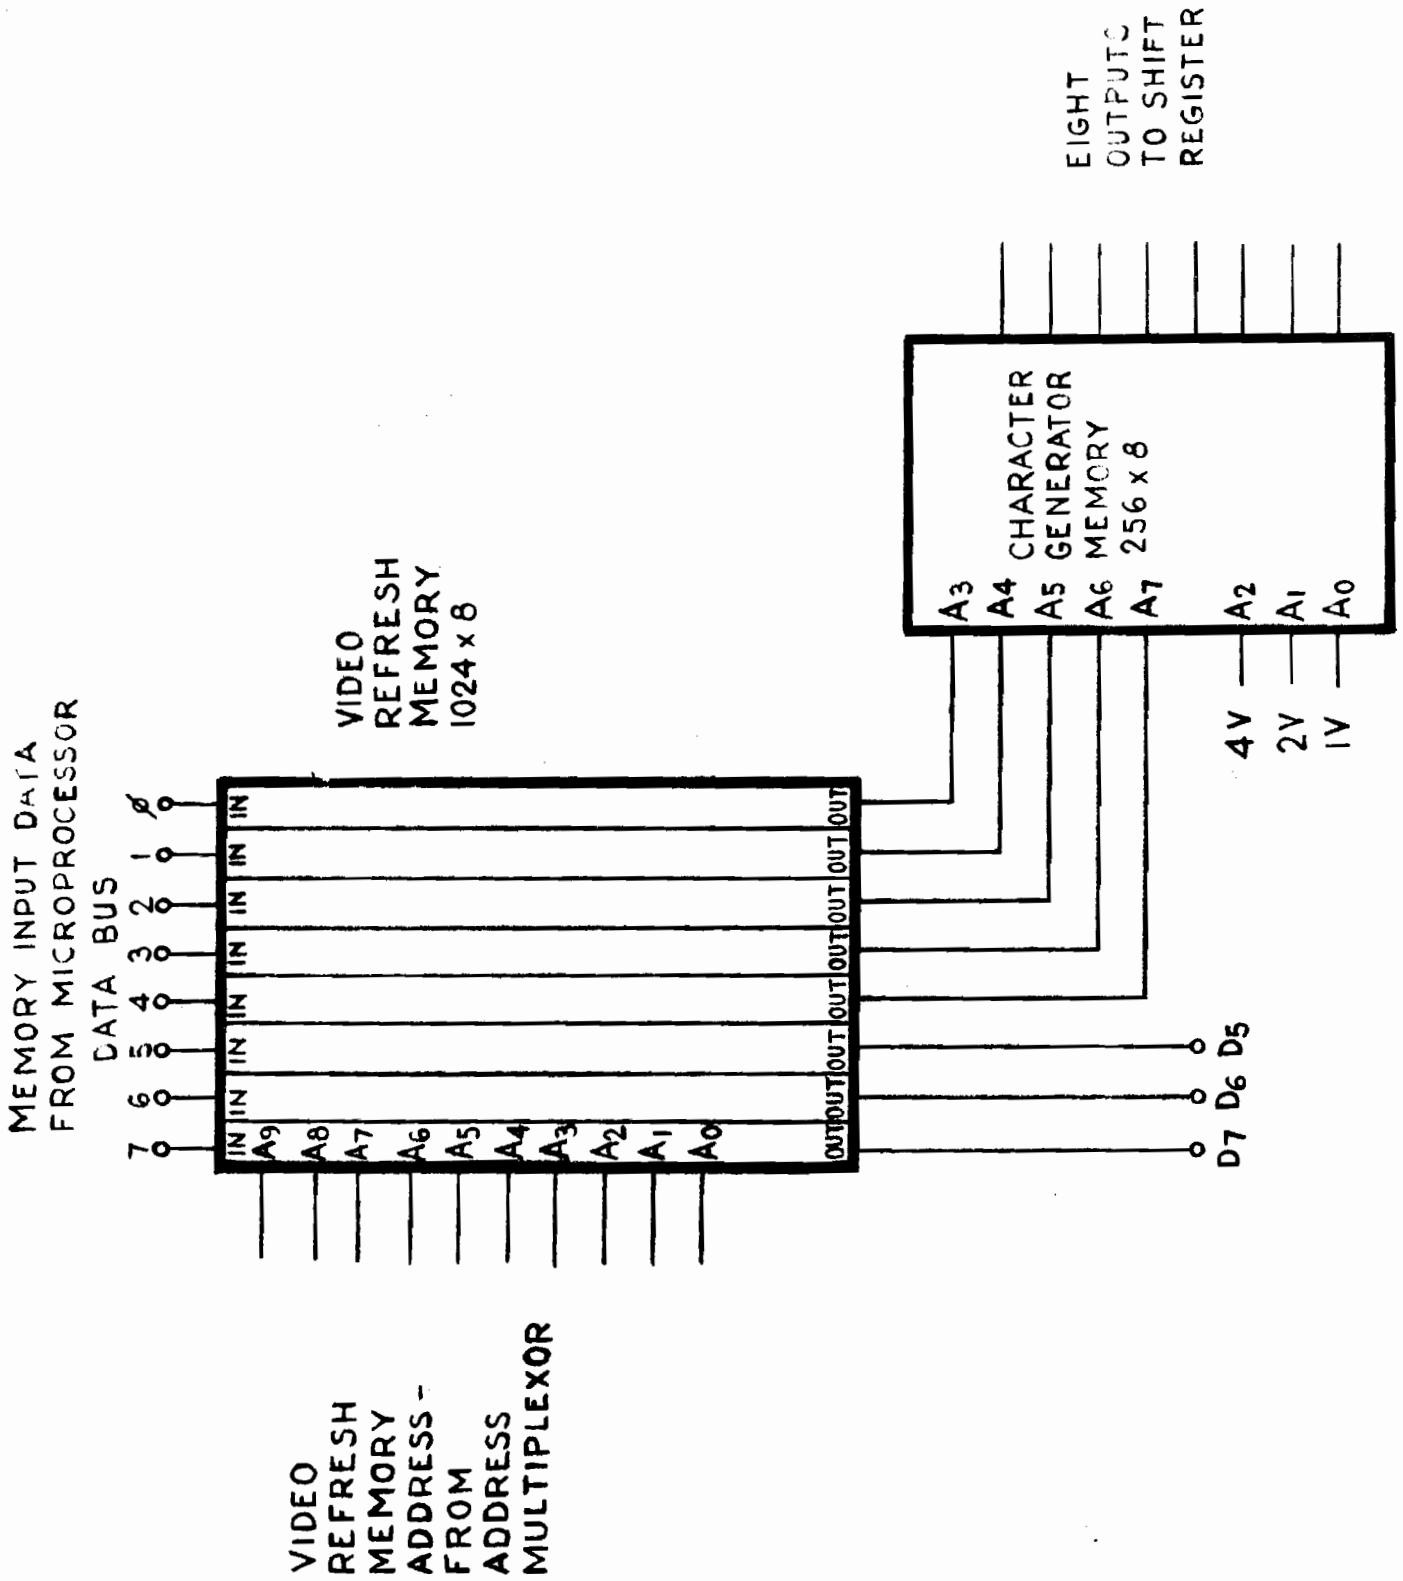


FIG 2

FROM MICROPROCESSOR  
SYSTEM  
OUTPUT  
STROBE

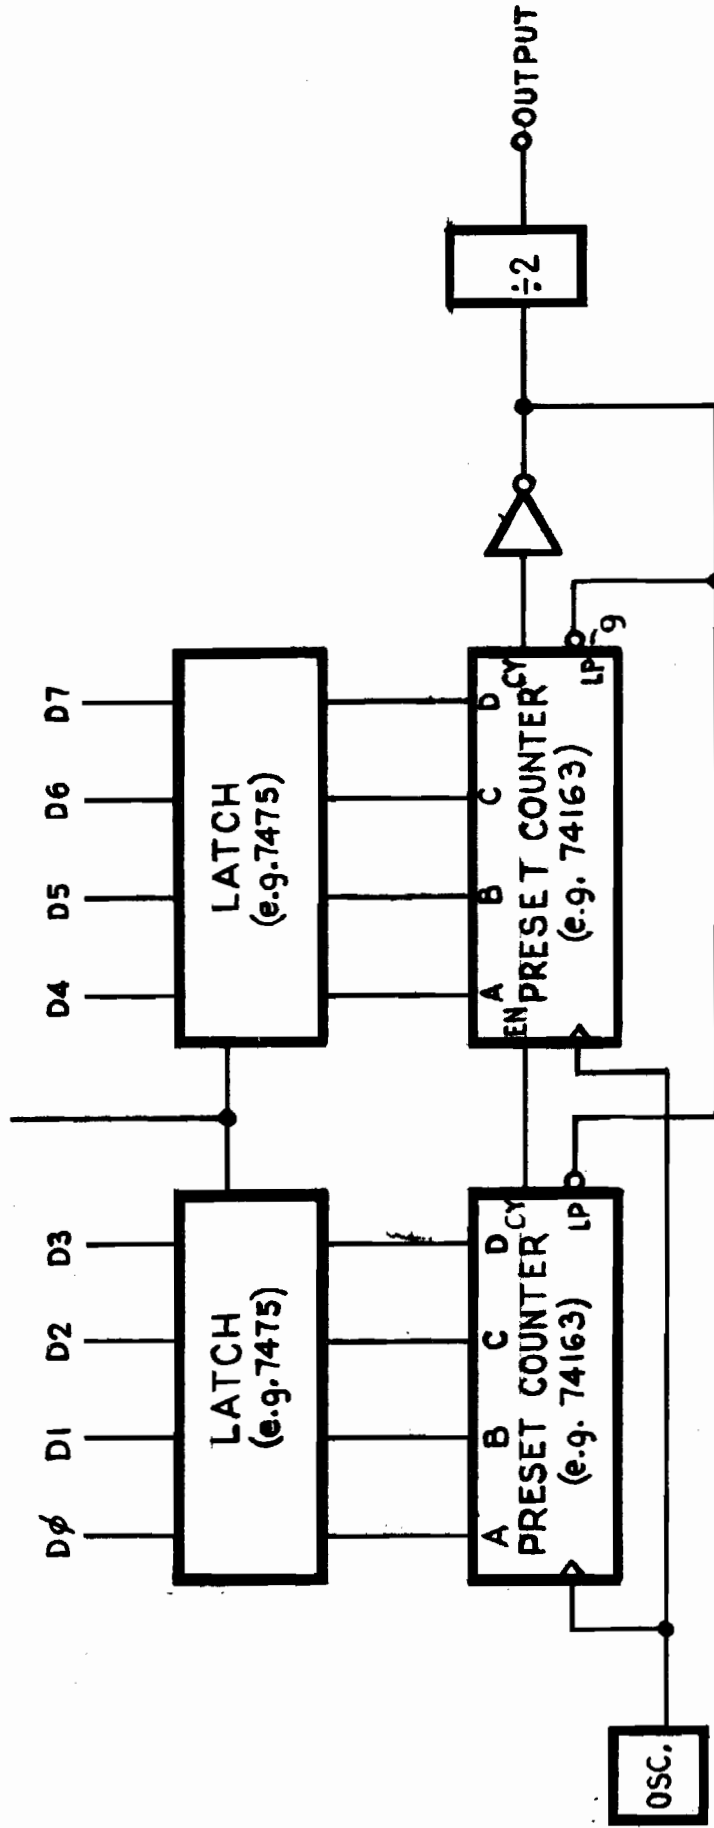

# TONE GENERATOR

FIG 2

## MAINTENANCE

NOTE: IF AT ANY TIME THE T.V. SCREEN SHOWS A MEANINGLESS DISPLAY OR THE GAME OTHERWISE MALFUNCTIONS, DROP A COIN IN THE COIN MECHANISM. THIS SHOULD CORRECT THE PROBLEM. IF NOT, THE GAME REQUIRES SERVICE.

-----

### FACTORY ASSISTANCE:

TECHNICAL HELP IS AVAILABLE FROM THE GREMLIN FACTORY. IF A PROBLEM OCCURS WHICH CANNOT BE EASILY RESOLVED BY YOUR DISTRIBUTOR, A PHONE CALL OR LETTER TO THE FACTORY WILL BRING ATTENTION TO YOUR PROBLEM BY A TRAINED REPRESENTATIVE.

-----

### EQUIPMENT:

1. Oscilloscope - 50 mhz or wider band width
2. DVM (Digital Volt Meter)
3. OHM Meter
4. Logic Probe
5. Solder Station - 75 Watt or less
6. Jumpers
7. Replacement parts including game programs:  
1024 x 4 prom 316-0004 and 316-0003

This is a recommended list for anyone attempting to service BLOCKADE.





## MAINTENANCE PROCEDURES

### BLOCKADE POWER SUPPLY MALFUNCTION:

1. Remove Output Connectors
2. Initial Tests: (GND lead to C-18 negative terminal located off board.)
  - a. +9v at "+" of C-18
  - b. +19v at C-6 (4700 mfd)
  - c. -19v at C-5 (4700 mfd)
  - d. -12v at pin 11
  - e. +12v at pin 12
  - f. +5v at pins 18-20
  - g. zero v (GND) at pins 14-16
3. If adjustments are required, attach meter ground to pins 14, 15 or 16 or equivalent local ground and:
  - a. +5v adjust - input lead to pins 18, 19, 20 and adjust R-9 for +5.0 to +5.1 VDC
  - b. +12v adjust - input lead to pin 12 and adjust R-8 for 11.5 to -12.1 VDC
  - c. -12v adjust - input lead to pin 11 and adjust R-10 for -11.1 to -12.1 VDC
4. If initial test is good, attach output connectors to Video Logic Board. Repeat Step 2.
  - a. If readings differ from those previously taken, a loading problem exists on the Video Logic Board.

No -12VDC or 5VDC on the Video Logic Board: (Power Supply Normal)

Video Logic Board Schematic (VLBS)(SH. 2). CHECK U-65, C-29 for open/short. CHECK R-40, C-12, D-2(VLBS) (SH. 1).

No +12VDC at CPU: (Power Supply Normal)

(VLBS)(SH. 2). CHECK U-65, C-28. (VLBS)(SH. 1). CHECK C-23, C-25.

No Ø1, Ø2 CLOCKS: (Ref. Fig. 4A)

(VLBS),(SH. 1). CHECK U-32 pins 1 and 3 for 20.79MHZ. CHECK U-31 pins 14, 13, 12 and 11 for 150 nsec sinewave. CHECK U-17 pins 1, 3, 4, and 10. CHECK latch network U-18 and U-8. CHECK high voltage outputs of U-30 pins 3 and 6. If not present, remove driver transistor. Should U-30 now output, replace driver transistor, if still not present replace U-30. U-45 could load down Ø1 clock.

No Coin Start:

(VLBS)(SH. 1) CHECK output U-9 pin 6. If signal not present, lift U-10 pin 5. Should signal return, replace U-10. If still not present, check output of U-8 pin 3. CHECK D-8 pull up diode and C-18. CHECK U-14. U-32 could be shorting signal to Q<sub>3</sub> and Q<sub>4</sub>.

No Coin Meter Action:

(VLBS)(SH. 1). Signal from U-8 pin 11 feeds current limiter R-27 to Q<sub>4</sub>. Saturated Q<sub>4</sub> turns on high current transistor Q<sub>5</sub>. Either Q<sub>4</sub> or Q<sub>5</sub> faulty, will inhibit meter.

No Player Control:

(VLBS)(SH. 1). Input accepted through U-12 and U-13 via data lines when strobe IND2 signal is generated through U-18 from U-45 and U-51 (status latch). CHECK U-18 pin 11, U-45 pin 8, U-45 pin 11, U-51 pin 10 for strobe pulse.

No Game Time Select:

(VLBS)(SH. 1). Input accepted through U-10 and U-11 via data lines when strobe IND1 signal is generated through U-18 from U-45 and U-51. CHECK U-18 pin 3, U-45 pin 8, U-45 pin 11, U-51 pin 10 for strobe pulse.

Meaningless Display on Screen: (Inserting coin does not correct problem)

There are two probable areas:

1. A program malfunction
  - a. Check ROM sockets, U-2 and U-3

2. A data transfer malfunction
  - a. Test the CPU Data Bus by ensuring proper voltage levels. Pullup resistors are used to make memory outputs compatible with the 8080A. High State Logic on the Data Bus should be 3.3v minimum. For involved problems in this area contact GREMLIN INDUSTRIES.

Characters on Screen not correct: (Wrong image behaves normally)

(VLBS)(SH. 2). Use character generator code table to isolate possible bad RAM (U-38; U-39; U-40; U-41, or U-42). Also probable are U-22, U-23 (data buffers), U-24, U-25, U-26 (multiplexers), U-29 and U-43, U-49 (shift register).

No Video: (Ref. Fig. 4B, 4C, 4D)

(VLBS)(SH. 2). CHECK U-54, U-53 circuitry for H reset. U-52 pin 1, clock for horiz. scan. U-55, U-58 provides timing for vert. scan. U-56 provides for vert. blanking.

Bad Video:

(VLBS)(Sh. 2). Bad video could be vertical roll or horizontal sliding. CHECK U-55 pin 12 and U-56 pin 4 of horizontal or vertical generators. CHECK U-63 pins 12 and 13 for vertical and horizontal blanking. U-64 develops sync pulses.

Monitor Mal function:

Refer to Motorola Service Manual (File VP 12). This manual included with BLOCKADE schematics.

Audio Tones; Sour/None:

(VLBS)(SH. 2). U-68, U-61, U-62, U-66, U-67, U-60 comprise tone generator. Amplifier on Power Supply Board (U-4, Q<sub>5</sub>, Q<sub>3</sub>, Q<sub>X</sub>, Q<sub>9</sub>). Could also be problem area.

Boom; Sour/None:

(VLBS)(SH. 1, Sh. 2). D-6, Q<sub>10</sub>, Q<sub>9</sub>, Q<sub>11</sub>, U-5, Q<sub>7</sub>, Q<sub>8</sub>, Generates Boom. Amplifier section on Power Supply Board (U-4, Q<sub>5</sub>, Q<sub>3</sub>, Q<sub>8</sub>, Q<sub>9</sub>), also probable.

# CHARACTER CODE TABLE

U						U					
38	39	40	41	42		38	39	40	41	42	
0	0	0	0	0	田	1	0	0	0	0	0
0	0	0	0	1	五	1	0	0	0	1	1
0	0	0	1	0	𠄎	1	0	0	1	0	2
0	0	0	1	1	𠄏	1	0	0	1	1	3
0	0	1	0	0	𠄐	1	0	1	0	0	4
0	0	1	0	1	𠄑	1	0	1	0	1	5
0	0	1	1	0	𠄒	1	0	1	1	0	6
0	0	1	1	1	𠄓	1	0	1	1	1	7
0	1	0	0	0	⬆	1	1	0	0	0	8
0	1	0	0	1	⬇	1	1	0	0	1	9
0	1	0	1	0	⬅	1	1	0	1	0	(BLANK)
	1	0	1	1	⬆	1	1	0	1	1	⊞
0	1	1	0	0	⬆	1	1	1	0	0	TE
0	1	1	0	1	➡	1	1	1	0	1	TI
0	1	1	1	0	⬇	1	1	1	1	0	JE
0	1	1	1	1	⬆	1	1	1	1	1	JR

GAME  
OVER



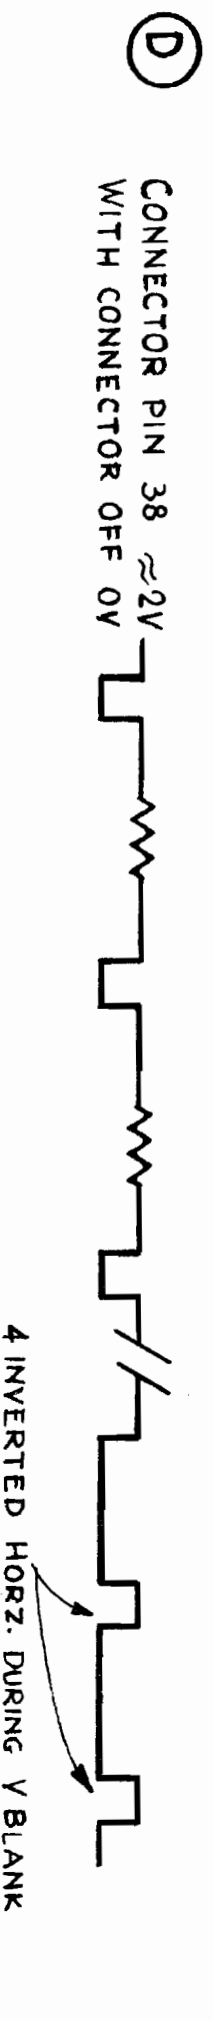
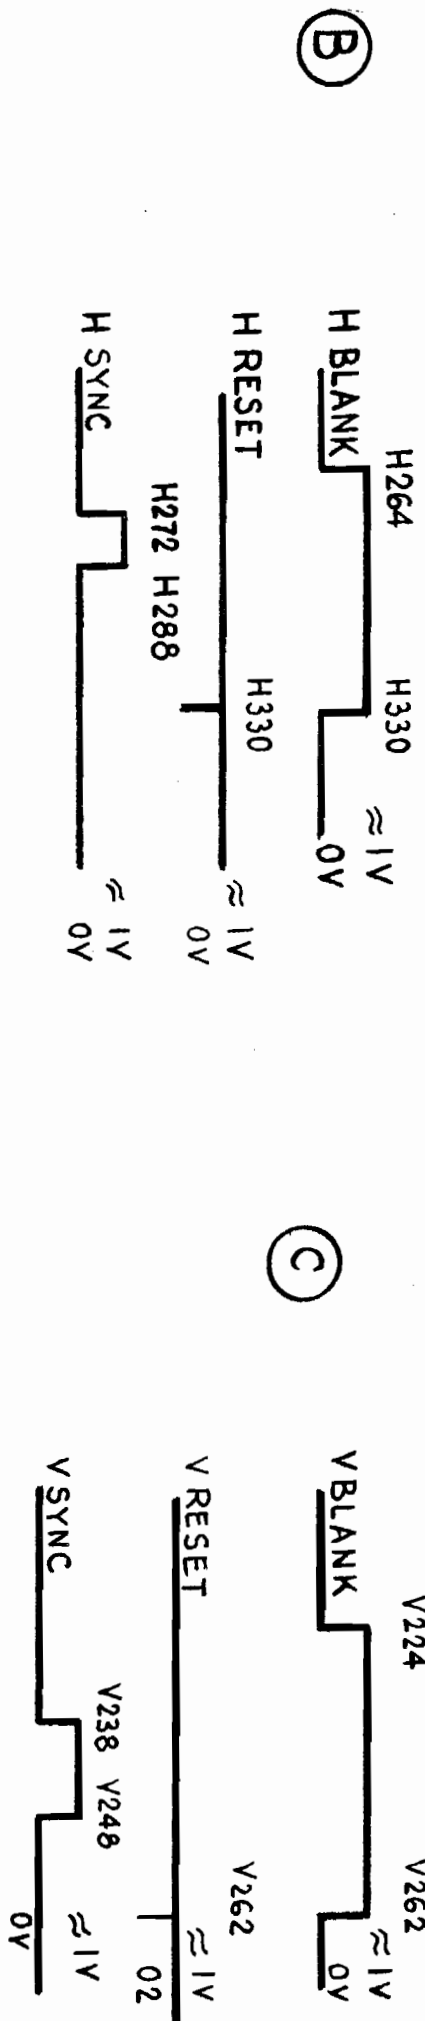
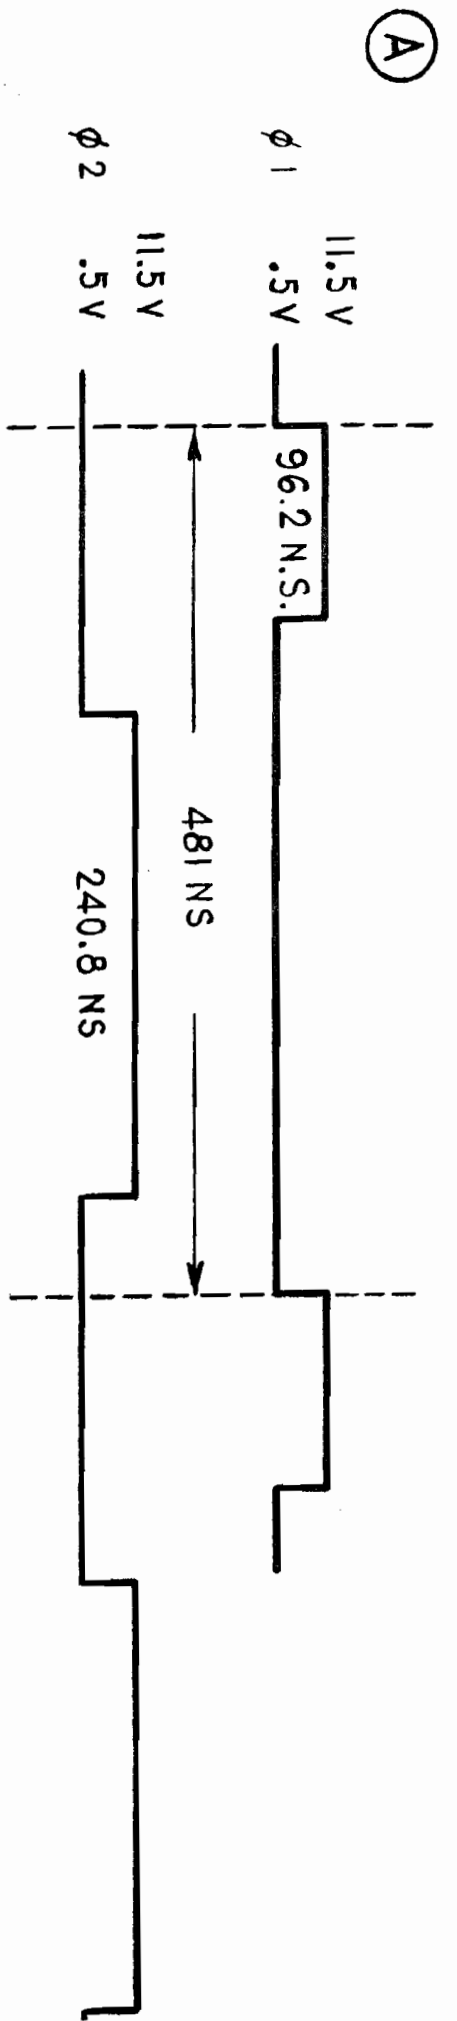


FIG. 4

## BLOCKADE PARTS LIST

<u>DESCRIPTION</u>	<u>PART NUMBER</u>	<u>QTY. USED</u>
ANCHOR WASHER	280-0028	1
ASSY, CONTROL BLOCK	807-0007	1
CABLE TIE	280-0005	10
CONN, CRIMP COINBOX	211-0001	6
CONN, CRIMP LOCK	211-0005	14
CONN, FEM 4 PIN BLK	212-0005	2
CONN, FSM 10 PIN	212-0016	1
CONN, KEY, POLARIZING	211-0007	4
CONN, SPADE LUG 1/4"	211-0019	2
DECAL, VOLUME CONTROL	420-0031	1
KNOB, VOLUME CONTROL	240-0001	1
POT, 10K	475-0007	1
SWITCH BRACKET	250-0031	1
SWITCH, SINGLE POLE, 4 POS.	511-0003	1
SWITCH, SLIDE, SPOT	510-0014	1
ASSY, JUMPER HARNESS	807-0006	1
CONN, CRIMP LOCK	211-0005	16
CONN, FEM 10 PIN	212-0016	2
CONN, KEY, POLARIZING	211-0007	4
ASSY, JUNCTION BOX	807-0009	1
BUSHING, STRESS/RELIEF	280-0007	2
CONN, QUICK 1/4" FEM	211-0017	2
CONN, QUICK 3/16" FEM	211-0022	4
CONN, SPADE LUG 1/4"	211-0019	14
CORD, LINE, 3 COND.	600-0001	1
FUSE, 2 AMP. 250v SB	514-0001	1
HOLDER, FUSE	514-0005	1
JUNCTION BOX	140-0016	1
JUNCTION BOX COVER	140-0017	1
SWITCH, SPDT CHERRY	510-0013	1
TERMINAL STRIP 6 POS.	280-0011	1
TERMINAL STRIP MARKER	280-0017	1
ASSY, MONITOR HARNESS	807-0005	1
CONN, CRIMP LOCK	211-0005	2
CONN, FEM 4 PIN BLK	212-0005	1
CONN, KEY, POLARIZING	211-0007	2
CONN, PIN CRIMP, FEM	211-0026	5
CONN, SPADE LUG 1/4"	211-0019	3

## BLOCKADE PARTS LIST (Cont'd.)


<u>DESCRIPTION</u>	<u>PART NUMBER</u>	<u>QTY. USED</u>
ASSY, OPERATOR SWITCH	807-0004	1
CABLE TIE	280-0005	10
CONN, CRIMP LOCK	211-0005	9
CONN, FEM 10 PIN	212-0016	1
CONN, KEY POLARIZING	211-0007	1
CONN, QUICK, 1/4" FEM	211-0017	16
CONN, SPADE LUG 1/4"	211-0019	2
SWITCH, P/BUTTON, UNIMAX	510-0012	8
SWITCH, PLATE	250-0029	2
ASSY, POWER INTERRUPT	807-0012	1
ASSY, POWER SUPPLY	807-0003	1
ASSY, SPEAKER CABLE	807-0010	1
CONN, CRIMP LOCK	211-0005	2
CONN, FEM 4 PIN BLK	212-0005	1
CONN, KEY, POLARIZING	211-0007	2
CONN, QUICK 3/16" FEM	211-0022	2
ASSY, VIDEO LOGIC B/A	807-0001	1
BEZEL FRAME	250-0032	1
CABINET B/A	140-0014	1
CABINET FEET	280-0030	4
CASH BOX	220-0012	1
CASH BOX, LOCKING ASSY	252-0014	1
CLIP, WIRE HOLD DOWN	280-0004	35
COIN COUNTER ASSY	807-0011	1
CONN, CRIMP LOCK	211-0005	2
CONN, FEM 10 PIN	212-0016	1
CONN, KEY, POLARIZING	211-0007	1
COUNTER, DIGITAL	220-0008	1
CORNER STRIP	420-0037	4
DECAL, BLOCKADE	420-0032	1
DECAL, CAUTION 115V	420-0030	1
DECAL, IMPORTANT NOTE	420-0038	2
DECAL, RE-CYCLE	420-0040	1
DECAL, SERIAL NUMBER	420-0028	1
DECAL, SERIAL NUMBER, SMALL	420-0041	1
DECAL, SERVICE	420-0029	1
DRAWINGS, BLOCKADE	420-0042	1
DUAL COIN MECHANISM	220-0010	1
LAMP, FLUORESCENT, 18"	390-0011	1
LAMP, FLUORESCENT, 18", (FIXTURE)	390-0012	1
LATCH, LOCK B/A	220-0015	1

## BLOCKADE PARTS LIST (Contd.)

<u>DESCRIPTION</u>	<u>PART NUMBER</u>	<u>QTY. USED</u>
LOCK, PANEL	320-0009	1
MASK, SHADOW CABINET	253-0014	1
MONITOR SCREEN	253-0012	1
NUT, WIRE	280-0010	2
PANEL, DISPLAY UPPER	253-0013	1
PANEL, FRONT SWITCH	250-0030	1
PLATE, LOCK STRIKE	250-0033	1
SPEAKER COVER 6 x 9	130-0002	1
SPEAKER, GAME	130-0001	1
SPRING, RETAINER	250-0034	1
SWITCH, LIP	250-0048	1
SWITCH, SLAM W/PLATE	510-0016	1
TOP COVER	420-0035	1
VIDEO MONITOR 19"	200-0002	1
WRAP AROUND SIDE	420-0034	1






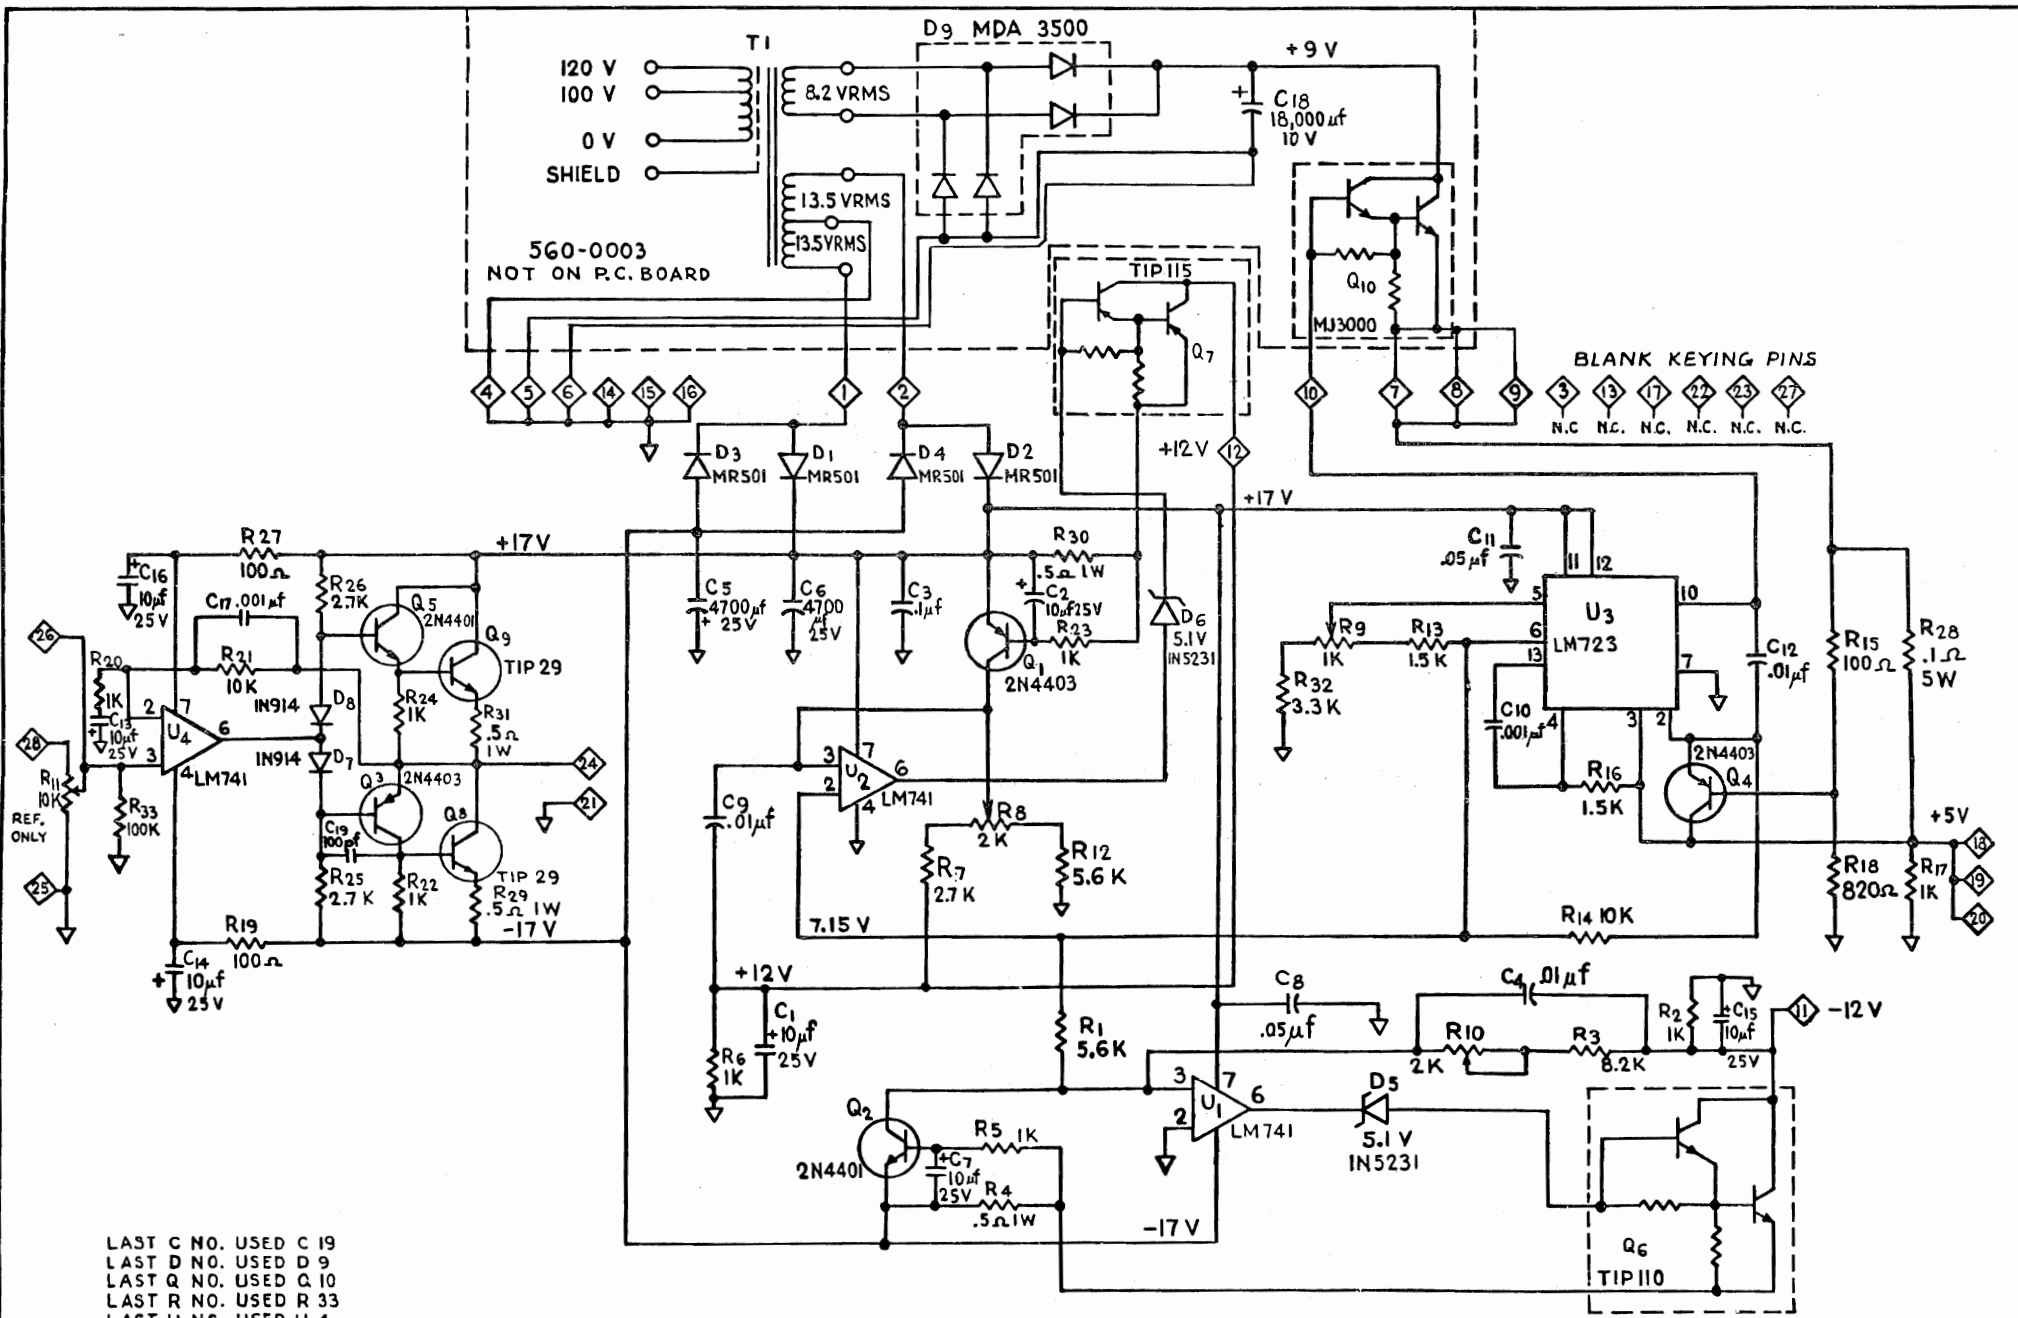

LAST C NO. USED C 19  
 LAST D NO. USED D 9  
 LAST Q NO. USED Q 10  
 LAST R NO. USED R 33  
 LAST U NO. USED U 4

**GREMLIN INDUSTRIES INC.**  
 8401 AERO DR. SAN DIEGO, CA. 92123

REVISIONS	TITLE
	SCHEMATIC
	BLOCKADE PWR. SUPPLY
DRAWN Joe M. CHECKED	SCALE
APPROVED	NONE
	DRAWING NO.
	807-0002A

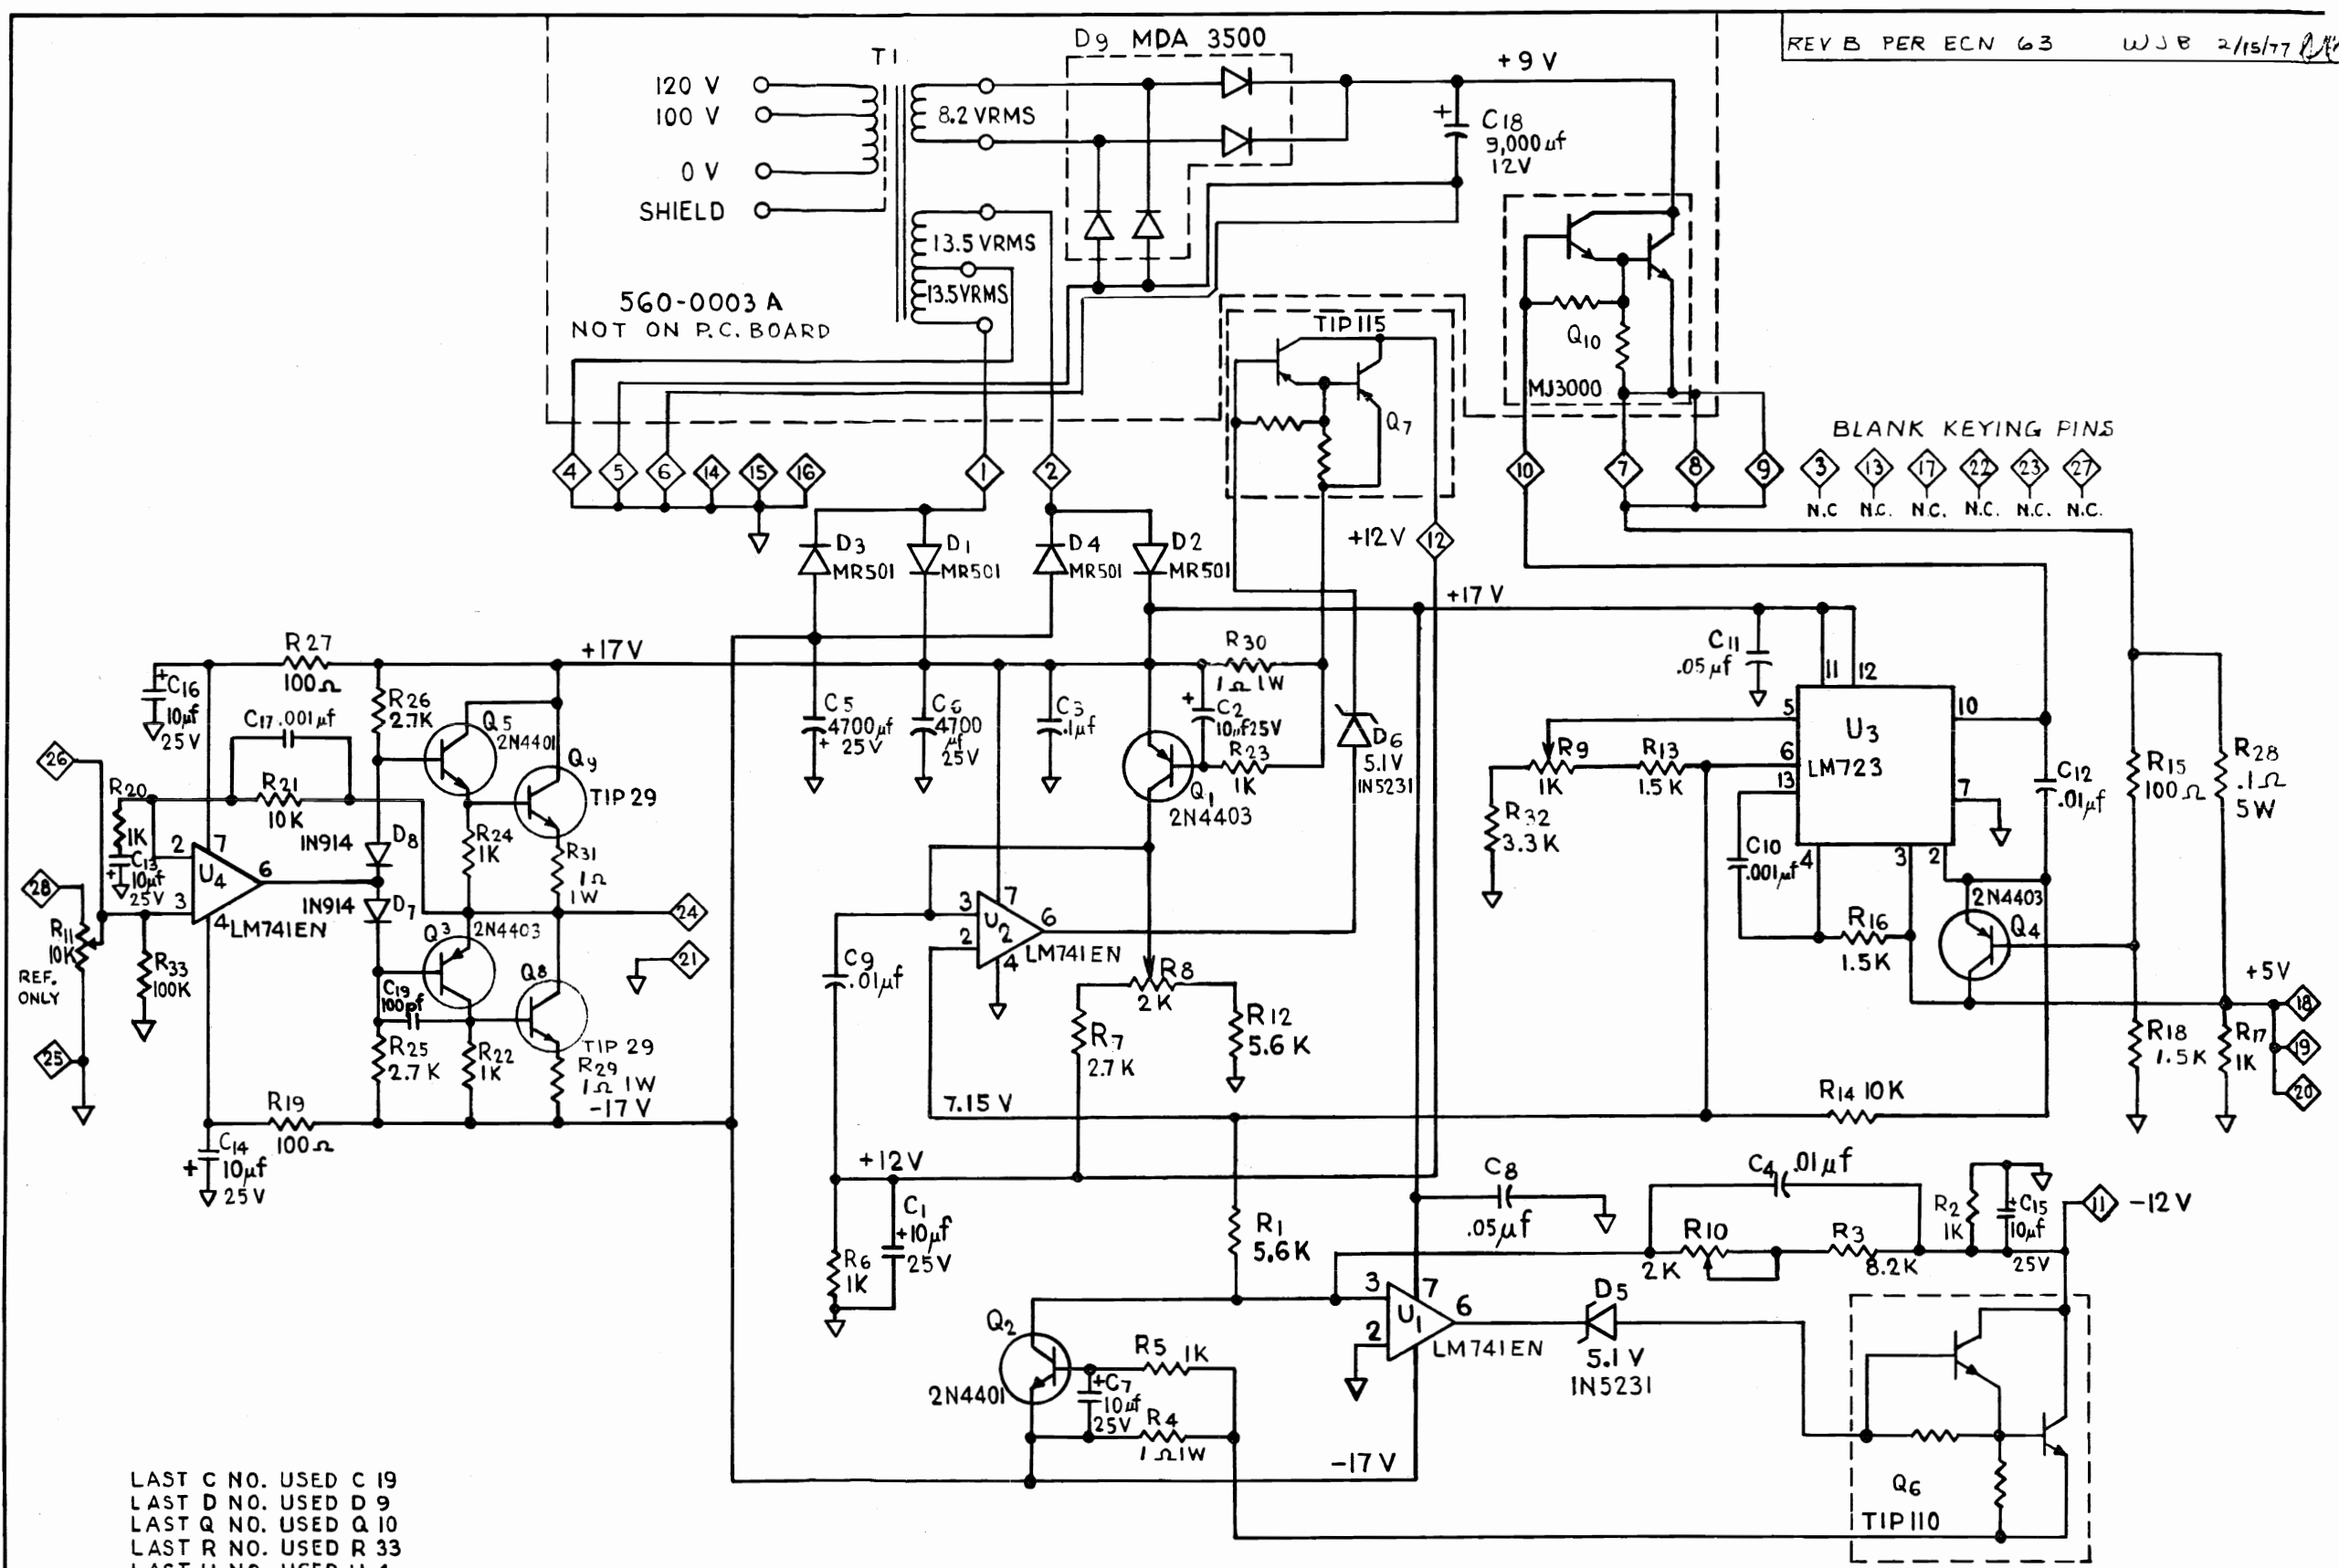


LAST C NO. USED C 19  
 LAST D NO. USED D 9  
 LAST Q NO. USED Q 10  
 LAST R NO. USED R 33  
 LAST U NO. USED U 4

**GREMLIN INDUSTRIES INC.**  
 8401 AERO DR. SAN DIEGO, CA. 27

REVISIONS	TITLE
	SCHEMATIC
	BLOCKADE PWR. SUPPLY
DRAWN Joe M.	CHECKED
APPROVED	SCALE
	NONE
	DRAWING NO.
	807-0003

REVISIONS			
ZONE	LTR	DESCRIPTION	DATE

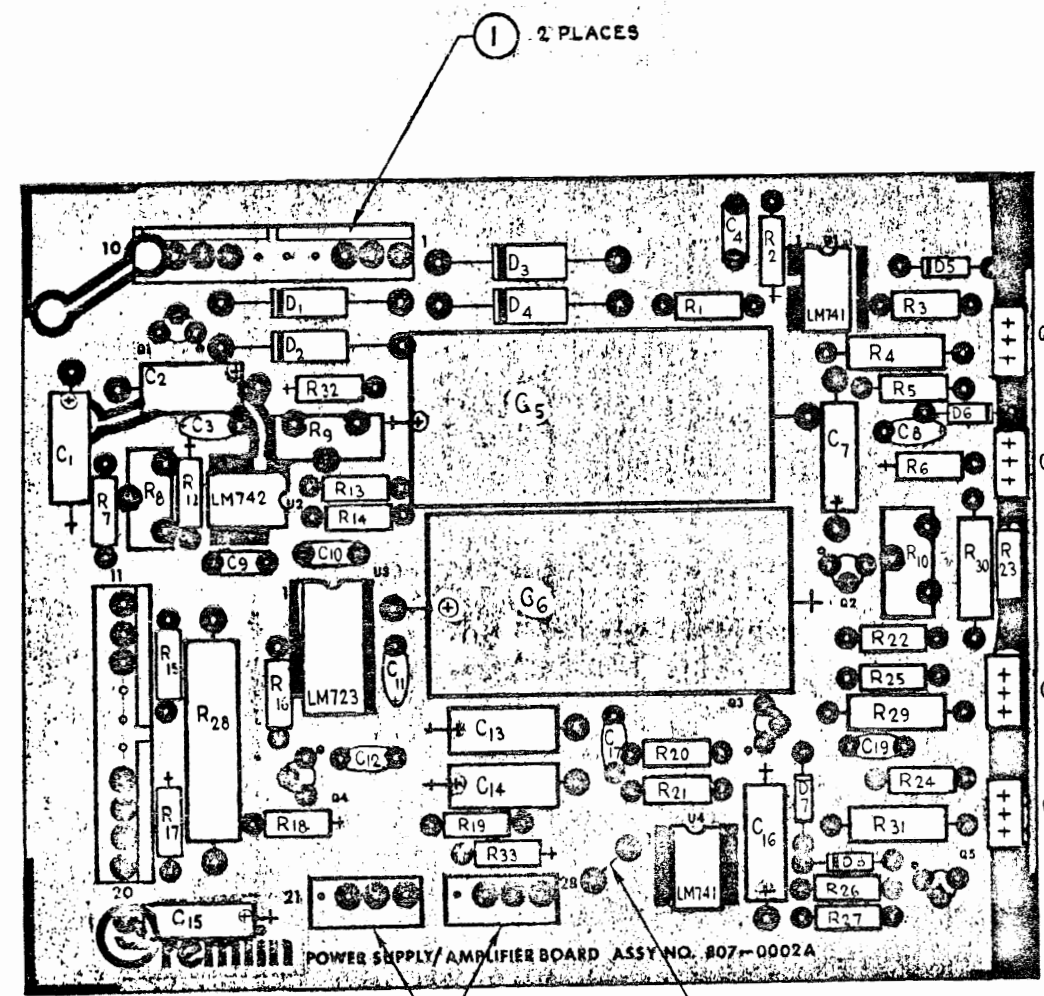


2	2	212 - 0004	CONN. MALE 4 PIN
1	2	212 - 0003	CONN. MALE 10 PIN
P.C.B. 1	1	170 - 0058A	P.C. BOARD
Q8 Q9	2	482 - 0016	XISTOR TIP 29
Q7	1	482 - 0015	XISTOR TIP 115
Q6	1	482 - 0013	XISTOR TIP 110
Q2 Q5	2	482 - 0014	XISTOR 2N4401
Q1 Q3 Q4	3	482 - 0006	XISTOR 2N4403
D7 D8	2	481 - 0006	DIODE IN914 OR IN4148
D5 D6	2	481 - 0008	DIODE ZENER IN5231
D1 D4	4	481 - 0004	DIODE MR 501
C19	1	151 - 0002	CAP. CER. 100 P 50 V
C10 C17	2	151 - 0008	CAP. CER. .001 M 50 V
C8 C11	2	151 - 0001	CAP. CER. .05 M 50 V
C5 C6	2	150 - 0019	CAP. E. 4700 M 25 V
C4 C9 C12	3	151 - 0011	CAP. CER. .01 M 50 V
C3	1	151 - 0012	CAP. CER. .1 M 50 V
C1 C2 C7 C13 C14-C16	7	150 - 0004	CAP. E. 10 M 25 V
R9	1	475 - 0004	POT. 1 K TRIMMER
R8 R10	2	475 - 0005	POT. 2 K TRIMMER
R28	1	473 - 00R1	RES. .1 OHM 5 W 5%
R18	1	471 - 0821	RES. 870 OHM 1/2 W 5%
R19 R19 R27	3	471 - 0101	RES. 100 OHM 1/2 W 5%
R4 R29-R31	4	472 - 00R5	RES. 0.5 OHM 1 W 5%
R33	1	471 - 0104	RES. 100 K OHM 1/2 W 5%
R32	1	471 - 0332	RES. 3.3 K OHM 1/2 W 5%
R14 R21	2	471 - 0103	RES. 10 K OHM 1/2 W 5%
R13 R16	2	471 - 0152	RES. 1.5 K OHM 1/2 W 5%
R7 R25 R26	3	471 - 0272	RES. 2.7 K OHM 1/2 W 5%
R3	1	471 - 0822	RES. 8.2 K OHM 1/2 W 5%
R5 R6 R7 R10 R22-R24	8	471 - 0102	RES. 1 K OHM 1/2 W 5%
R1 R12	2	471 - 0562	RES. 5.6 K OHM 1/2 W 5%
U3	1	313 - 0001	I.C. LM 723
U1 U2 U4	3	313 - 0004	I.C. LM 741

ITEM NO.		QTY	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION
PARTS LIST				
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE:		CONTRACT NO.		
FRACTIONS	DECIMALS	ANGLES	GREMLIN INDUSTRIES INC.	
±	.XX ±	±	8401 AERO DR. SAN DIEGO, CA. 92123	
±	.XXX ±	±	POWER SUPPLY/AMP. BOARD	
MATERIAL		APPROVALS	DATE	BLOCKADE
		DRAWN Joe M.	11-18-76	PARTS OVERLAY
FINISH		CHECKED		
NEXT ASSY USED ON		SIZE CODE IDENT NO. DRAWING NO.		
APPLICATION		D 807-0002A		
DO NOT SCALE DRAWING		SCALE 2 X SHEET 1 OF 1		

OMIT R11

807-0002 A

REVISIONS				
ZONE	LTR	DESCRIPTION	DATE	APPROVED
B	PER	E.C.N. 63	WJB 2/15/77	<i>[Signature]</i>

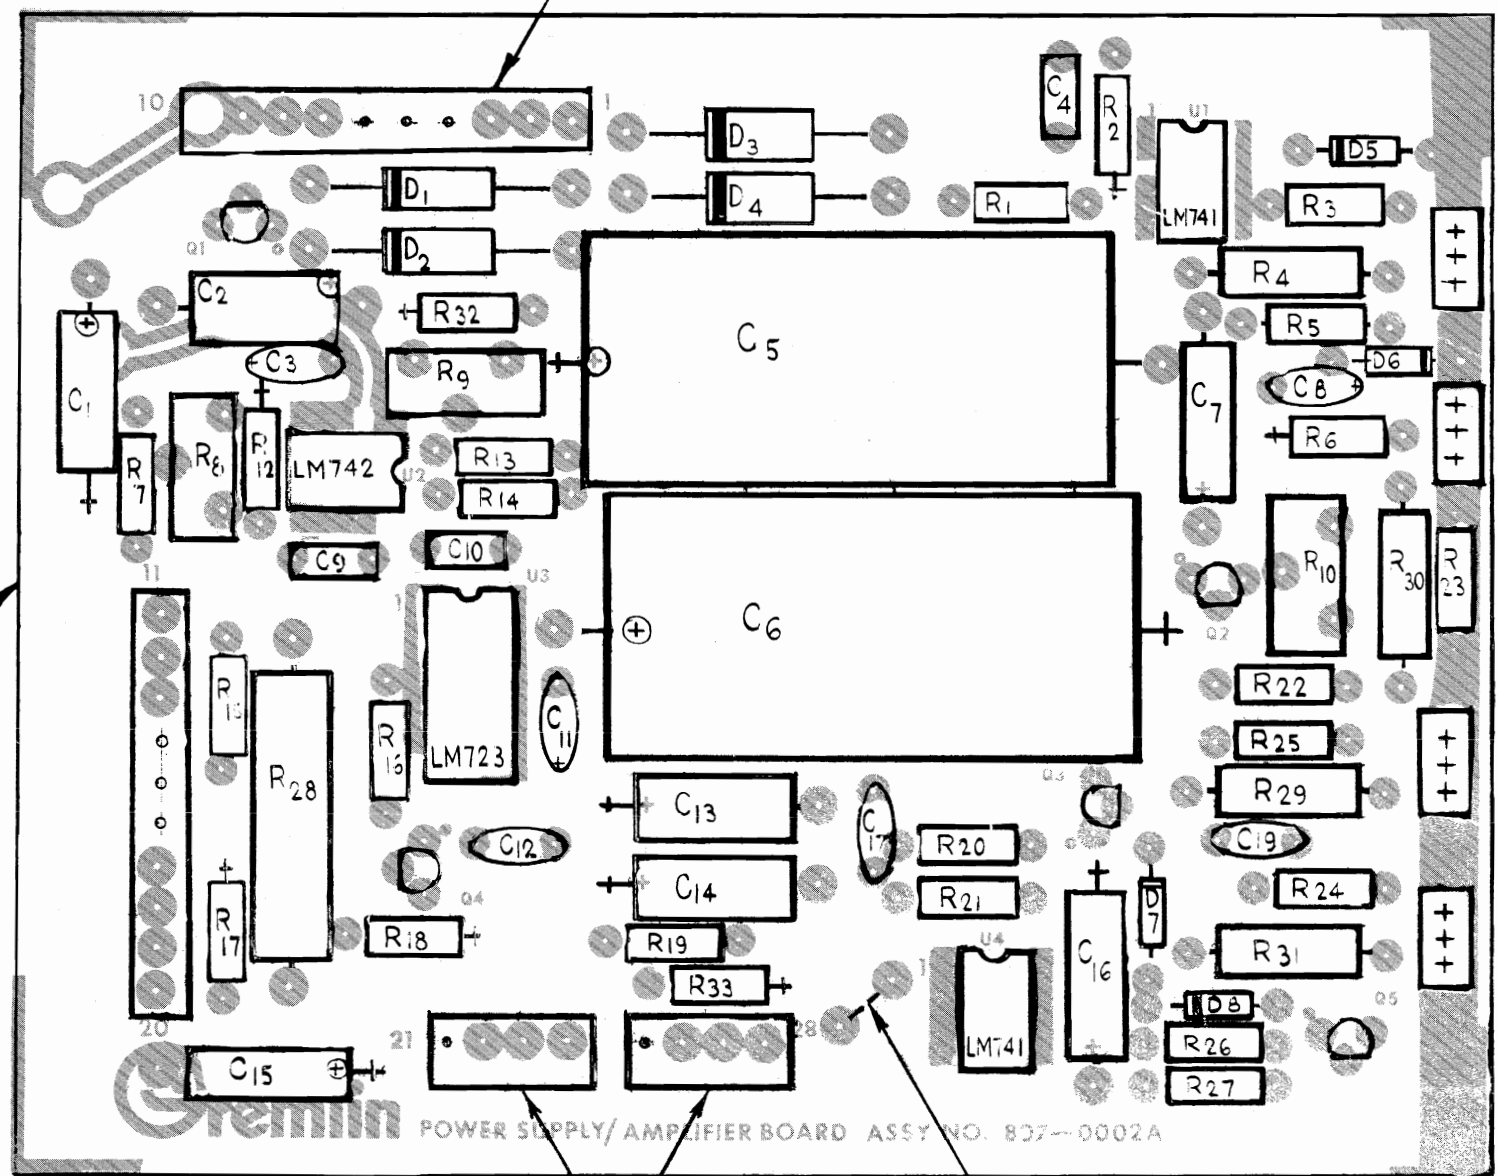

2 2 PLACES

1

3

JUMPER

OMIT R11


ITEM NO.	QTY	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION
B	2	212-0004	CONN. MALE 4 PIN
P	2	212-0003	CONN. MALE 10 PIN
J	1	170-0058A	P.C. BOARD
Q4 Q9	2	482-0016	XISTOR TIP 29
Q7	1	482-0015	XISTOR TIP 115
Q6	1	482-0013	XISTOR TIP 110
Q2 Q5	2	482-0014	XISTOR 2N4401
Q1 Q3 Q4	3	482-0006	XISTOR 2N4403
D7 D8	2	481-0006	DIODE 1N914 OR 1N4148
D5 D6	2	481-0008	DIODE ZENER 1N5231
D1 D4	4	481-0004	DIODE MR 501
C19	1	151-0002	CAP. CER. 100 P 50 V
C16 C17	2	151-0008	CAP. CER. .001 M 50 V
C8 C11	2	151-0001	CAP. CER. .05 M 50 V
C5 C6	2	150-0019	CAP. E. 4700 M 25 V
C4 C9 C12	3	151-0011	CAP. CER. .01 M 50 V
C3	1	151-0012	CAP. CER. .1 M 50 V
C1 C2 C7 C13 C14 C16	7	150-0004	CAP. E. 10 M 25 V
R9	1	475-0004	POT. 1 K TRIMMER
R8 R10	2	475-0005	POT. 2 K TRIMMER
R28	1	473-0001	RES. .1 OHM 5 W 5%
R18 R19 R27	3	471-0101	RES. 100 OHM 1/2 W 5%
R4 R29-R31	4	472-0102	RES. 1 OHM 1 W 5%
R33	1	471-0104	RES. 100 K OHM 1/2 W 5%
R32	1	471-0332	RES. 3.3 K OHM 1/2 W 5%
R14 R21	2	471-0103	RES. 10 K OHM 1/2 W 5%
R13 R16 R18	3	471-0152	RES. 1.5 K OHM 1/2 W 5%
R7 R25 R26	3	471-0272	RES. 2.7 K OHM 1/2 W 5%
R3	1	471-0822	RES. 8.2 K OHM 1/2 W 5%
R2 R5 R6 R17 R20 R22-R24	8	471-0102	RES. 1 K OHM 1/2 W 5%
R1 R12	2	471-0562	RES. 5.6 K OHM 1/2 W 5%
U3	1	313-0001	I.C. LM 723
U1 U2 U4	3	313-0004	I.C. LM 741 EN

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE:  
 FRACTIONS    DECIMALS    ANGLES  
 ±                    .XX ±                    ° ±

CONTRACT NO. \_\_\_\_\_  
 APPROVALS    DATE  
 DRAWN Joe M.    11-18-76  
 CHECKED \_\_\_\_\_  
 MATERIAL \_\_\_\_\_  
 FINISH \_\_\_\_\_  
 NEXT ASSY    USED ON  
 APPLICATION    DO NOT SCALE DRAWING

PARTS LIST  
**GREMLIN INDUSTRIES INC.**  
 8401 AERO DR.    SAN DIEGO, CA. 92123  
**POWER SUPPLY/AMR BOARD**  
**BLOCKADE**  
**PARTS OVERLAY**  
 SIZE    CODE IDENT NO.    DRAWING NO.  
**D**                                    **807-0002E**  
 SCALE 2 X                                    SHEET 1 OF 1

D  
C  
B  
D  
A  
807-0002E

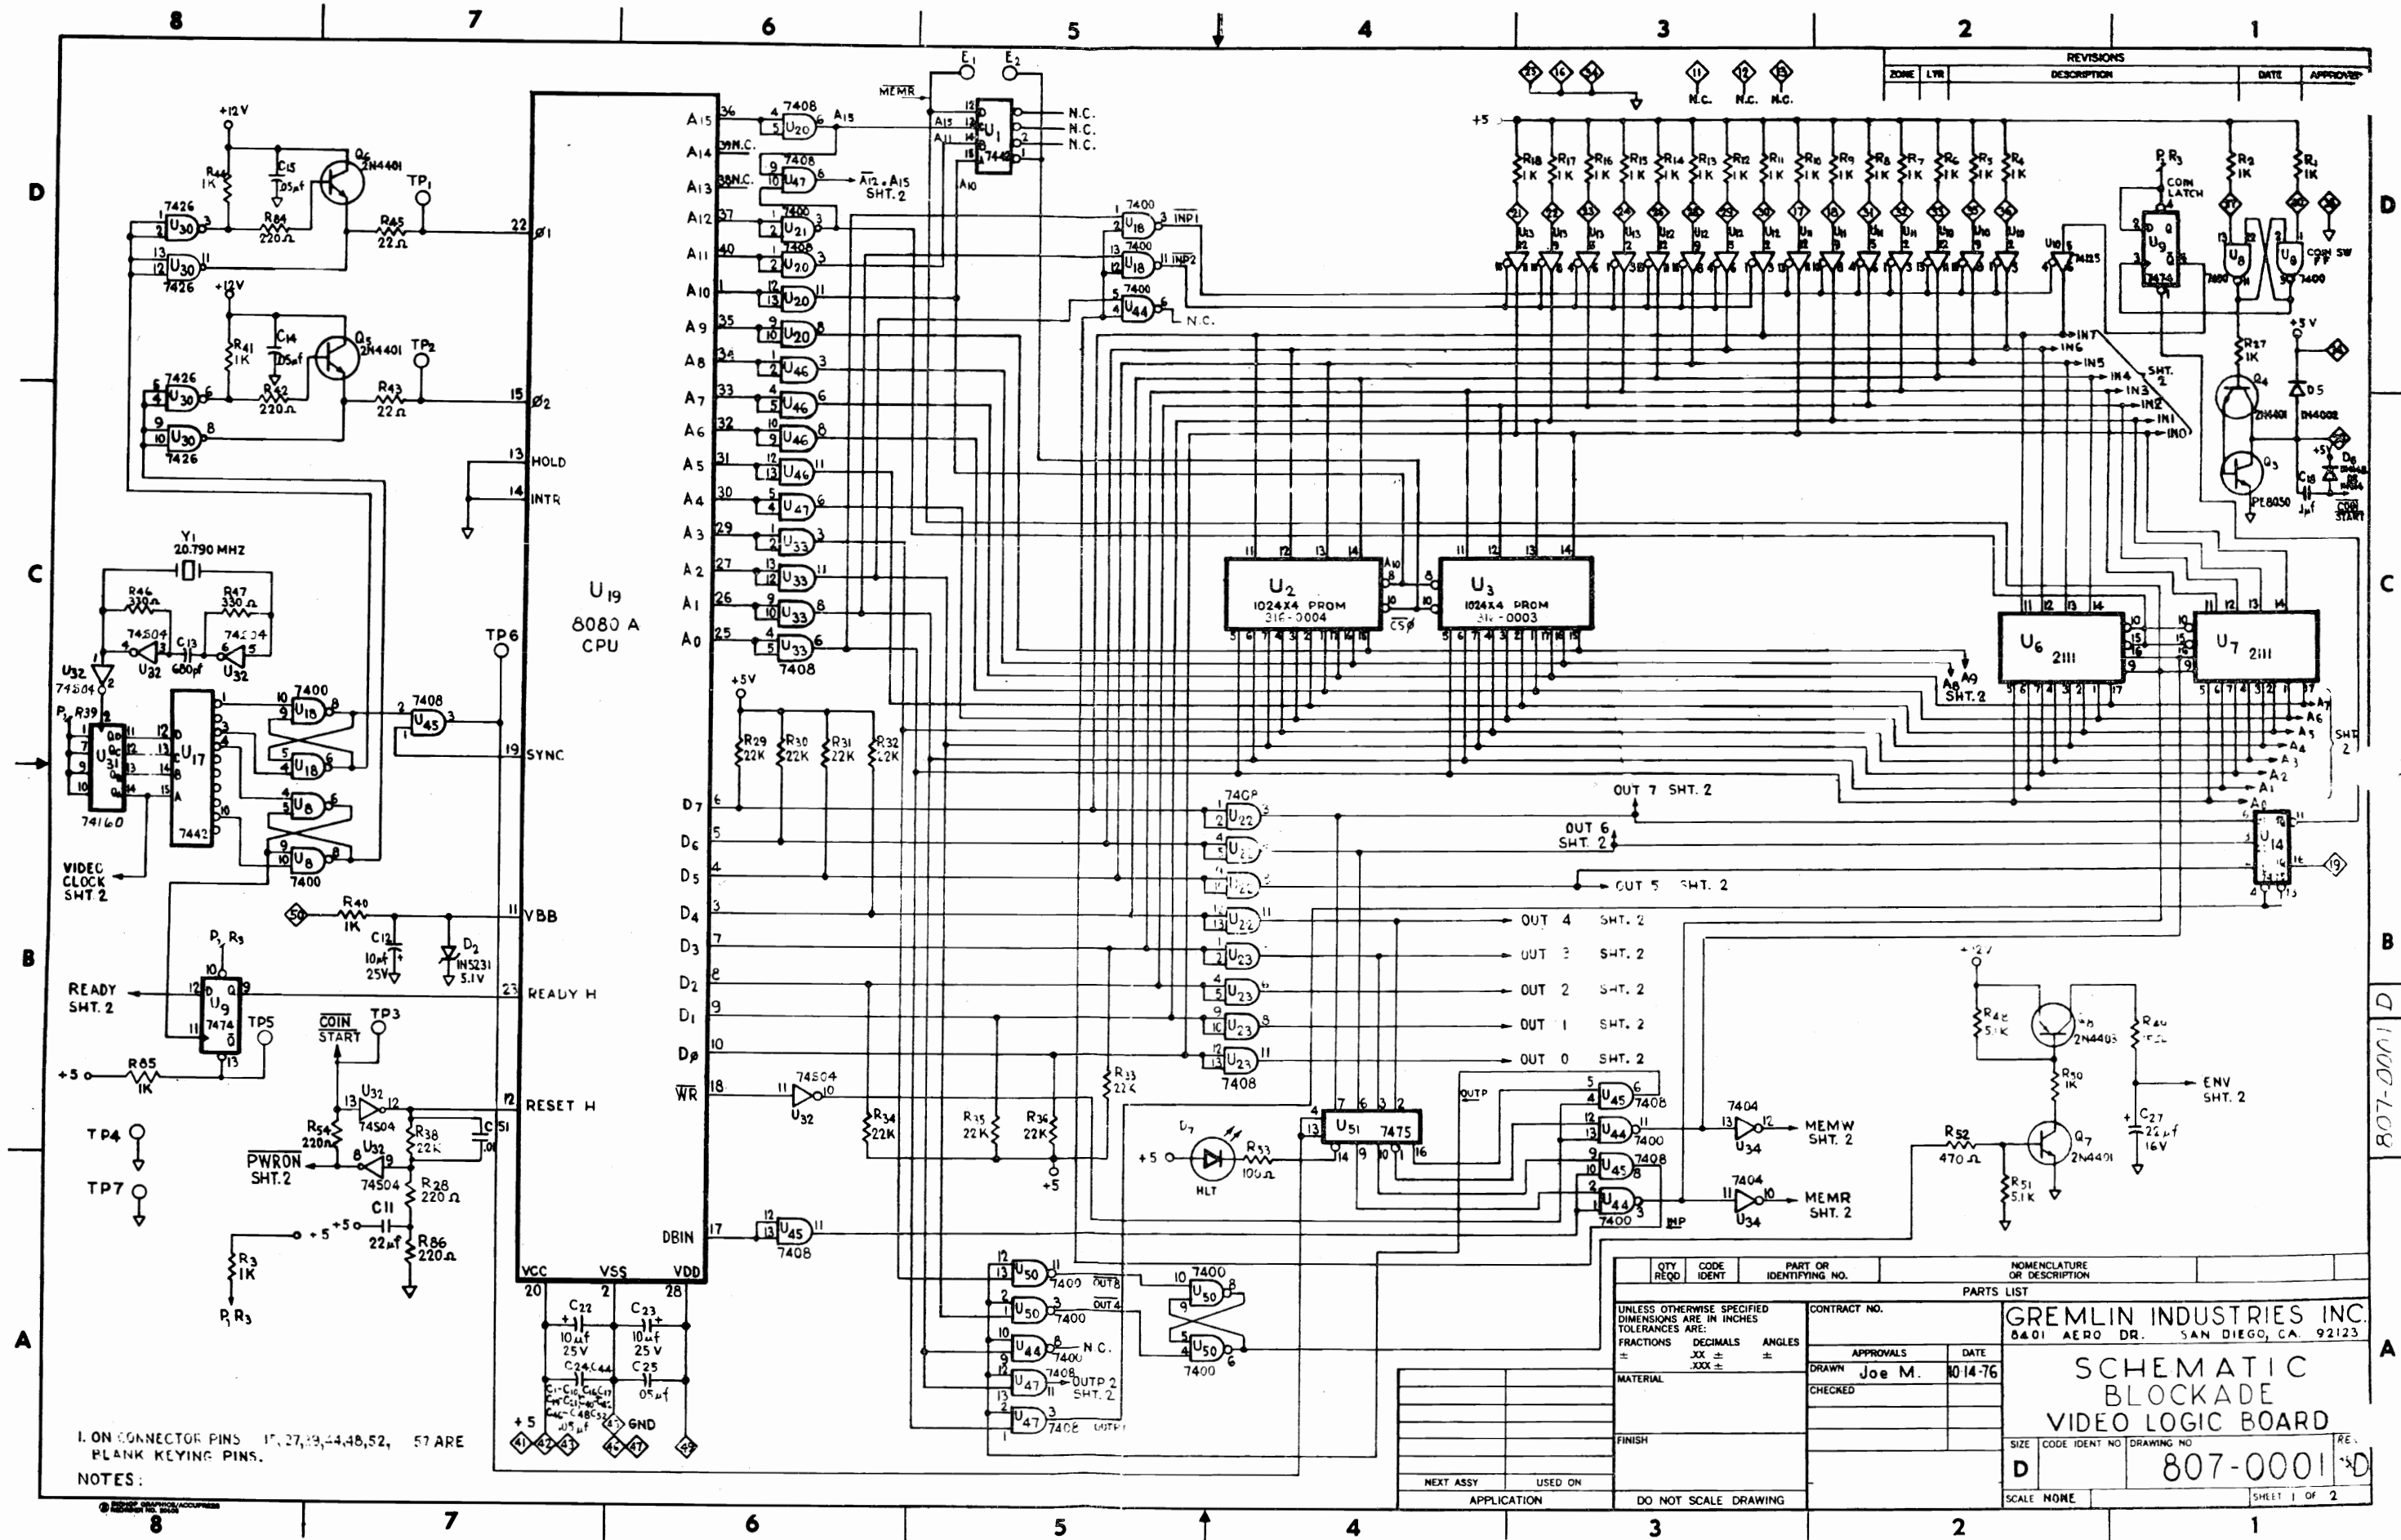

ZONE		LVR		DESCRIPTION	DATE	APPROVED

QTY REQD	CODE IDENT	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE:		CONTRACT NO.	
FRACTIONS	DECIMALS	ANGLES	<b>GREMLIN INDUSTRIES INC.</b> 8401 AERO DR. SAN DIEGO, CA. 92123
= .XX ±	= .XXX ±	±	
MATERIAL			
FINISH		APPROVALS	DATE
		Joe M.	10/14/76
NEXT ASSY USED ON		CHECKED	
APPLICATION		DO NOT SCALE DRAWING	


  

SIZE	CODE IDENT NO	DRAWING NO	RE.
D		807-0001	D
SCALE NAME		SHEET 1 OF 2	

NOTES:  
 1. ON CONNECTOR PINS 17, 27, 39, 44, 48, 52, 57 ARE PLANK KEYING PINS.

807-0001 D


REVISIONS			
ZONE	LTR	DESCRIPTION	DATE
D		PERFORME 10-15-76	2-4-77

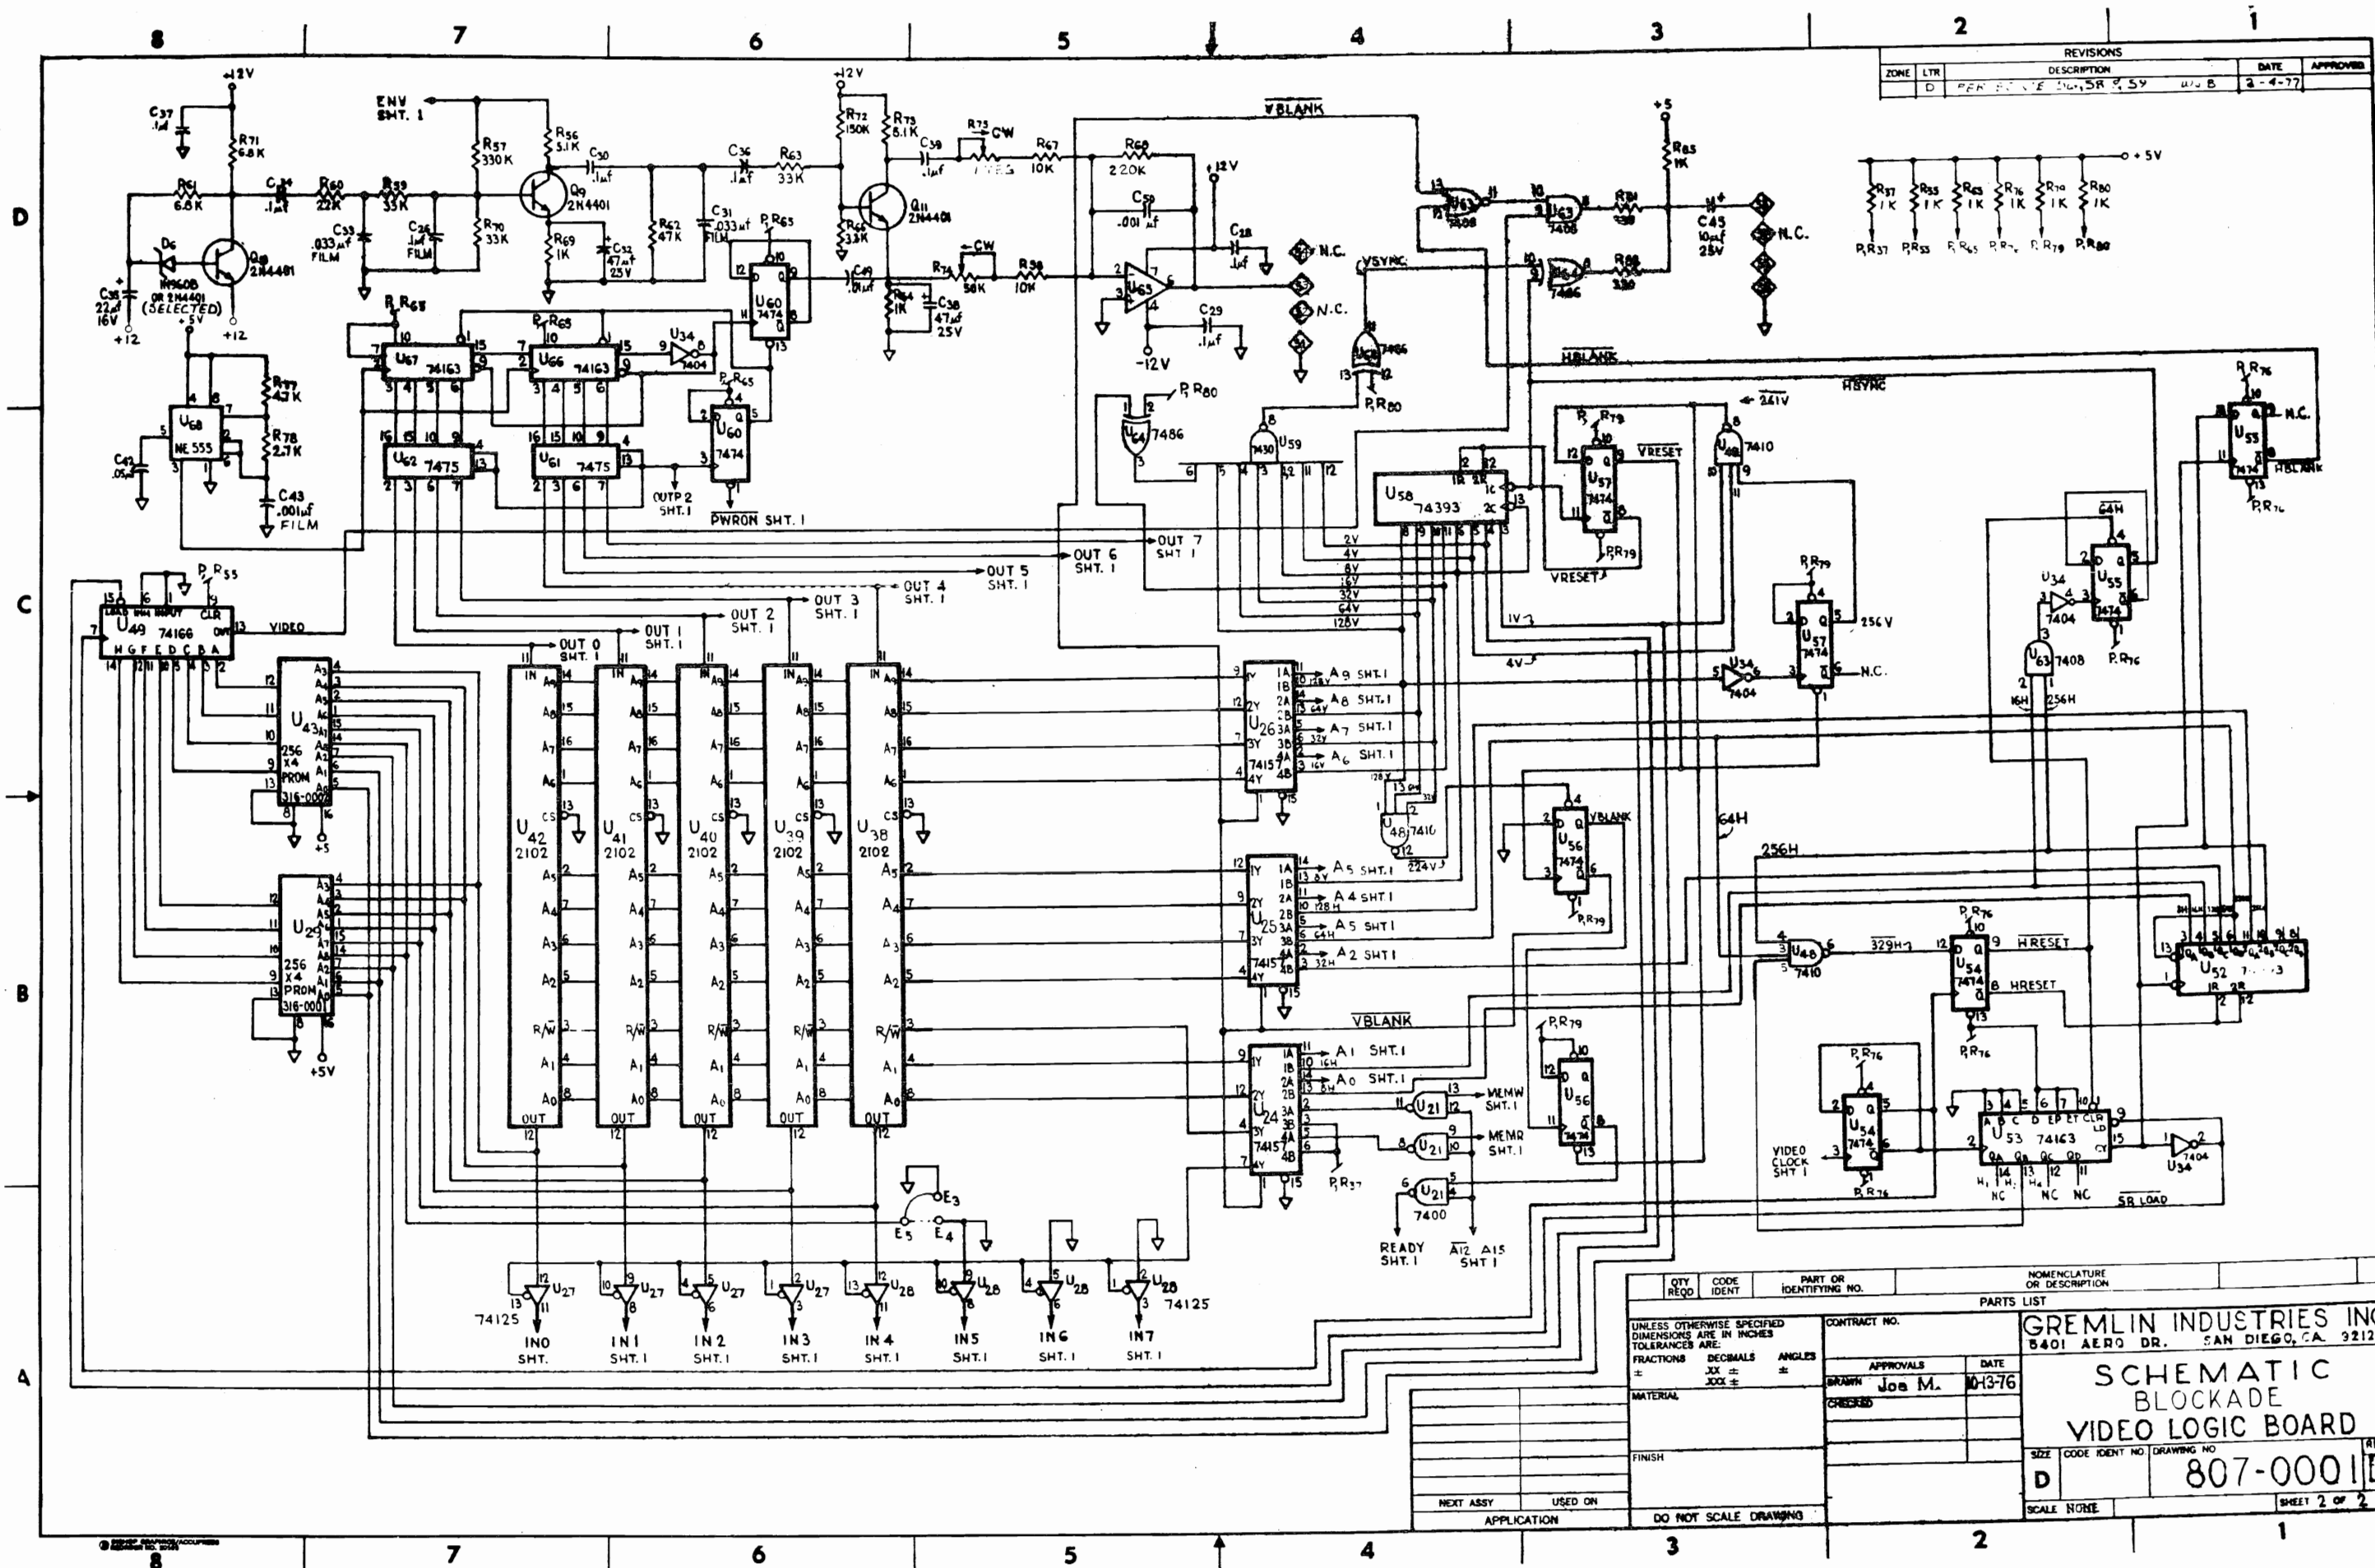

QTY REQD	CODE IDENT	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION
PARTS LIST			
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE:		CONTRACT NO.	
FRACTIONS ±	DECIMALS ±	ANGLES ±	DATE
MATERIAL	FINISH	APPROVALS	CHECKED
NEXT ASSY USED ON		DRAWN Job M. 10-13-76	
APPLICATION		DO NOT SCALE DRAWINGS	

**GREMLIN INDUSTRIES INC.**  
 8401 AERO DR. SAN DIEGO, CA. 92123  
**SCHEMATIC**  
**BLOCKADE**  
**VIDEO LOGIC BOARD**  
 SIZE CODE IDENT NO. DRAWING NO. REV  
 D 807-0001 D  
 SCALE NOTE SHEET 2 OF 2

807-0001 D

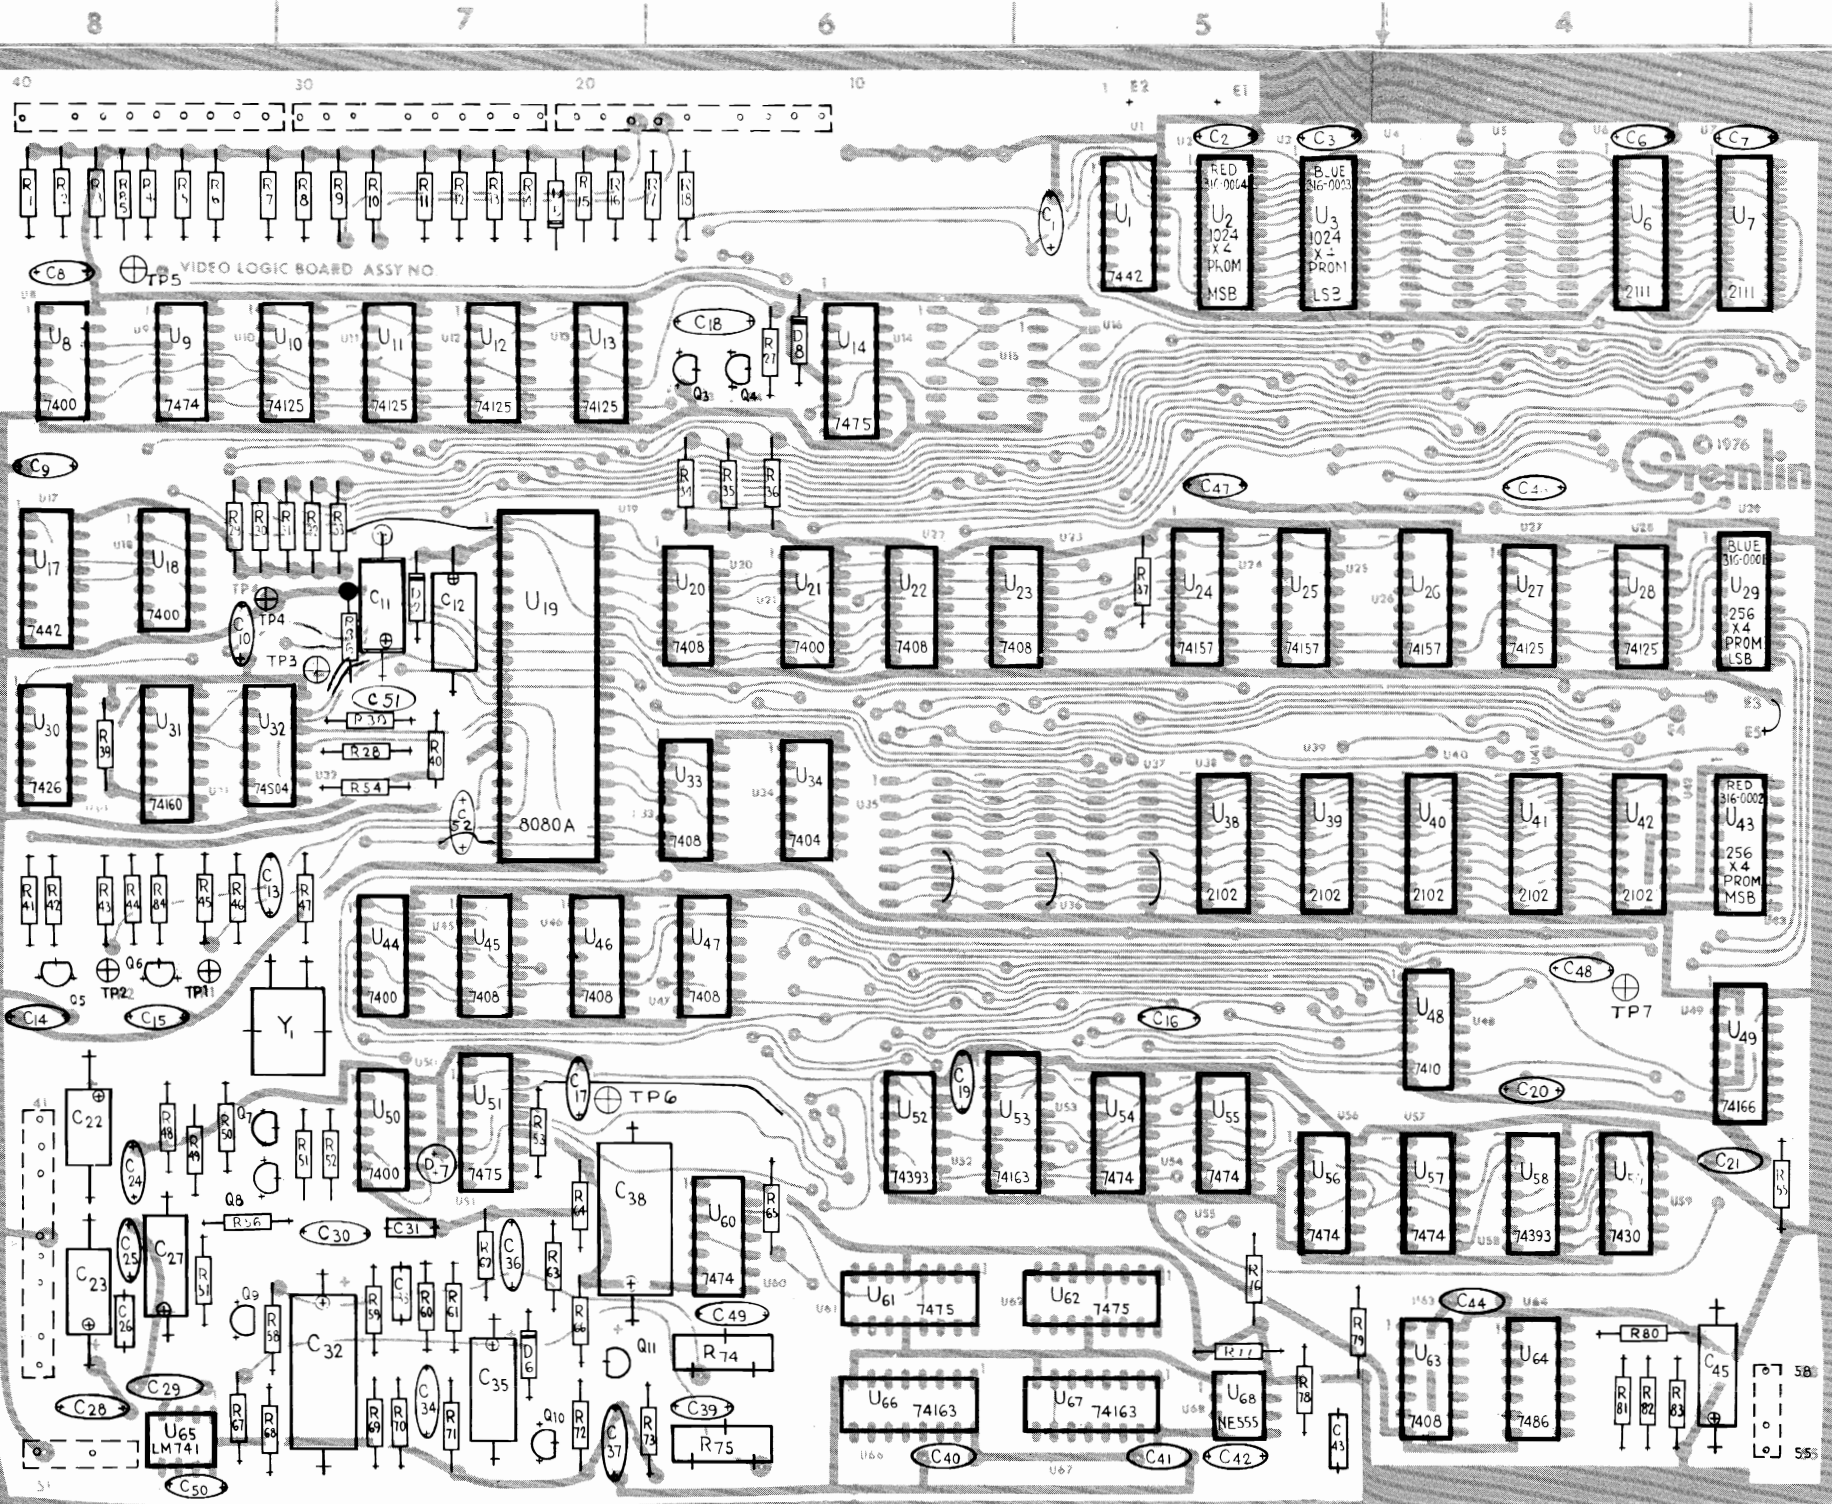

REVISIONS				
ZONE	LTR	DESCRIPTION	DATE	APPROVED
D		PER ECN'S 56 58 & 59	4/28/77	

TP1-TP7	7	211 - 0004	TEST POINT PINS
Y	1	230 - 0006	XTAL 20.790 MHZ CLK
U2U3 (REF. ONLY)	2	213 - 0002	SKT. 18 PIN DUAL INLN
	2	212 - 0004	CONN. MALE 4 PIN
	4	212 - 0003	CONN. MALE 10 PIN
PCB1	1	170 - 0057B	PCB B/A LOGIC
Q8	1	482 - 0006	XISTOR 2N 4403
Q4-Q7-Q9-Q11	7	482 - 0014	XISTOR 2N 4401
Q3	1	482 - 0010	XISTOR PE 8050
D7	1	390 - 0003	L.E.D. RED
D6	1	481 - 0003	DIODE ZENER IN960B
D5	1	481 - 0001	DIODE IN 4002
D2	1	481 - 0008	DIODE ZENER IN5231
D8	1	481 - 0006	DIODE IN914 OR IN4148
C43	1	152 - 0007	CAP. F. .001 M 250 V
C32 C38	2	150 - 0012	CAP. E. 47 M 25 V
C31 C33	2	152 - 0015	CAP. F. .033 M 250 V
C11 C27 C35	3	150 - 0015	CAP. E. 22 M 16 V
C26	1	152 - 0001	CAP. F. .1 M 100 V
C16 C22 C23 C45	4	150 - 0004	CAP. E. 10 M 25 V
C50	1	151 - 0008	CAP. CER. .001 M 50 V
C49 C51	2	151 - 0011	CAP. CER. .01 M 50 V
C28 C30 C34 C36 C37 C39 C40	8	151 - 0012	CAP. CER. .1 M 50 V
C13	1	151 - 0005	CAP. CER. 680 P 50 V
C46-C48 C52	4	151 - 0001	CAP. CER. .05 M 50 V
C6-C10 C25 C40-C42 C44	10	151 - 0001	CAP. CER. .05 M 50 V
C1-C3 C4-C17 C19-C21 C24	11	151 - 0001	CAP. CER. .05 M 50 V
R75	1	475 - 0002	RES. 1 MEG OHM CTS
R74	1	475 - 0008	RES. 50 K OHM CTS
R68	1	471 - 0224	RES. 220 K OHM 1/2 W 5%
R58	1	471 - 0222	RES. 22 K OHM 1/2 W 5%
R79	1	471 - 0272	RES. 27 K OHM 1/2 W 5%
R62	1	471 - 0473	RES. 47 K OHM 1/2 W 5%
R72	1	471 - 0154	RES. 150 K OHM 1/2 W 5%
R77	1	471 - 0472	RES. 47 K OHM 1/2 W 5%
R61 R71	2	471 - 0682	RES. 68 K OHM 1/2 W
R59 R63 R66 R70	4	471 - 0333	RES. 33 K OHM 1/2 W
R57	1	471 - 0334	RES. 330 K OHM 1/2 W
R53	1	471 - 0101	RES. 100 OHM 1/2 W
R52	1	471 - 0471	RES. 470 OHM 1/2 W
R49	1	471 - 0150	RES. 15 OHM 1/2 W
R48 R51 R56 R73	4	471 - 0512	RES. 51 K OHM 1/2 W
R47 R41 R81 R82	4	471 - 0331	RES. 330 OHM 1/2 W
R43 R45	2	471 - 0220	RES. 22 OHM 1/2 W
R42 R28 R64 R54 R86	5	471 - 0221	RES. 220 OHM 1/2 W
R58 R67	2	471 - 0103	RES. 10 K OHM 1/2 W
R29 R36 R60	9	471 - 0223	RES. 22 K OHM 1/2 W
R47 R80 R83 R41 R44	5	471 - 0102	RES. 1 K OHM 1/2 W
R64 R65 R69 R76 R79 R85	6	471 - 0102	RES. 1 K OHM 1/2 W
R1-R18 R21 R39 R40 R50 R55	23	471 - 0102	RES. 1 K OHM 1/2 W 5%
U3	1	316 - 0003	I.C. 1024X4 PROM LSB
U43	1	316 - 0002	I.C. 256X4 PROM MSB
U38-U42	5	315 - 0015	I.C. 2102 RAM (500 NS)
U6-U7	2	315 - 0018	I.C. 2111 RAM (500 NS)
U68	1	314 - 0001	I.C. TIMER NE 555
U65	1	313 - 0004	I.C. LM741
U64	1	314 - 0022	I.C. 7486
U59	1	314 - 0020	I.C. 7430
U53 U64 U67	3	314 - 0038	I.C. 74163
U52 U58	2	314 - 0030	I.C. 74393
U49	1	314 - 0039	I.C. 74166
U48	1	314 - 0010	I.C. 7410
U14 U51 U61 U62	4	314 - 0021	I.C. 7475
U34	1	314 - 0015	I.C. 7404
U32	1	314 - 0046	I.C. 74504
U31	1	314 - 0032	I.C. 74160
U30	1	314 - 0031	I.C. 7426
U29	1	316 - 0001	I.C. 256X4 PROM LSB
U24-U26	3	314 - 0029	I.C. 74157
U20 U22 U23 U24 U25	8	314 - 0012	I.C. 7408
U19	1	315 - 0014	I.C. 8080A CPU
U10-U13 U27 U28	6	314 - 0017	I.C. 74125
U9 U54-U57 U60	6	314 - 0006	I.C. 7474
U8 U18 U21 U44 U50	5	314 - 0009	I.C. 7400
U2	1	316 - 0004	I.C. 1024X4 PROM MSB
U17	2	314 - 0011	I.C. 7442



7. ON CONNECTOR PINS 15 27 39 44 48 52 54 57 ARE BLANK KEYING PINS.  
 6. OMIT U4 U5 U15 U16 U35 U36 U37 R19-R26 C4 C5 Q1 Q2 D1 D3 D4  
 5. LAST D NO. USED D8  
 4. LAST C NO. USED C52  
 3. LAST Q NO. USED Q11  
 2. LAST R NO. USED R86  
 1. LAST U NO. USED U68

**NOTES:**



ITEM NO.	QTY.	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION
PARTS LIST			
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE:		CONTRACT NO.	
FRACTIONS	DECIMALS	ANGLES	
±	.XX ±	±	
	.XXX ±		
MATERIAL		APPROVALS	DATE
FINISH		DRAWN Joe M	11-5-76
NEXT ASSY		CHECKED	
USED ON		GREMLIN INDUSTRIES INC. 1401 AERO DR. SAN DIEGO, CA. 92123	
APPLICATION		VIDEO LOGIC BOARD BLOCKADE PARTS OVERLAY	
DO NOT SCALE DRAWING		SIZE	CODE IDENT NO. DRAWING NO.
		D	807-0001
		SCALE 2 X	SHEET 1 OF 1



ZONE		LTR		REVISIONS	DATE	APPROVED
DESCRIPTION						

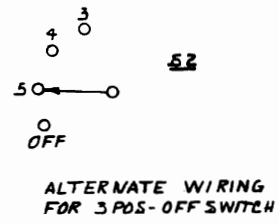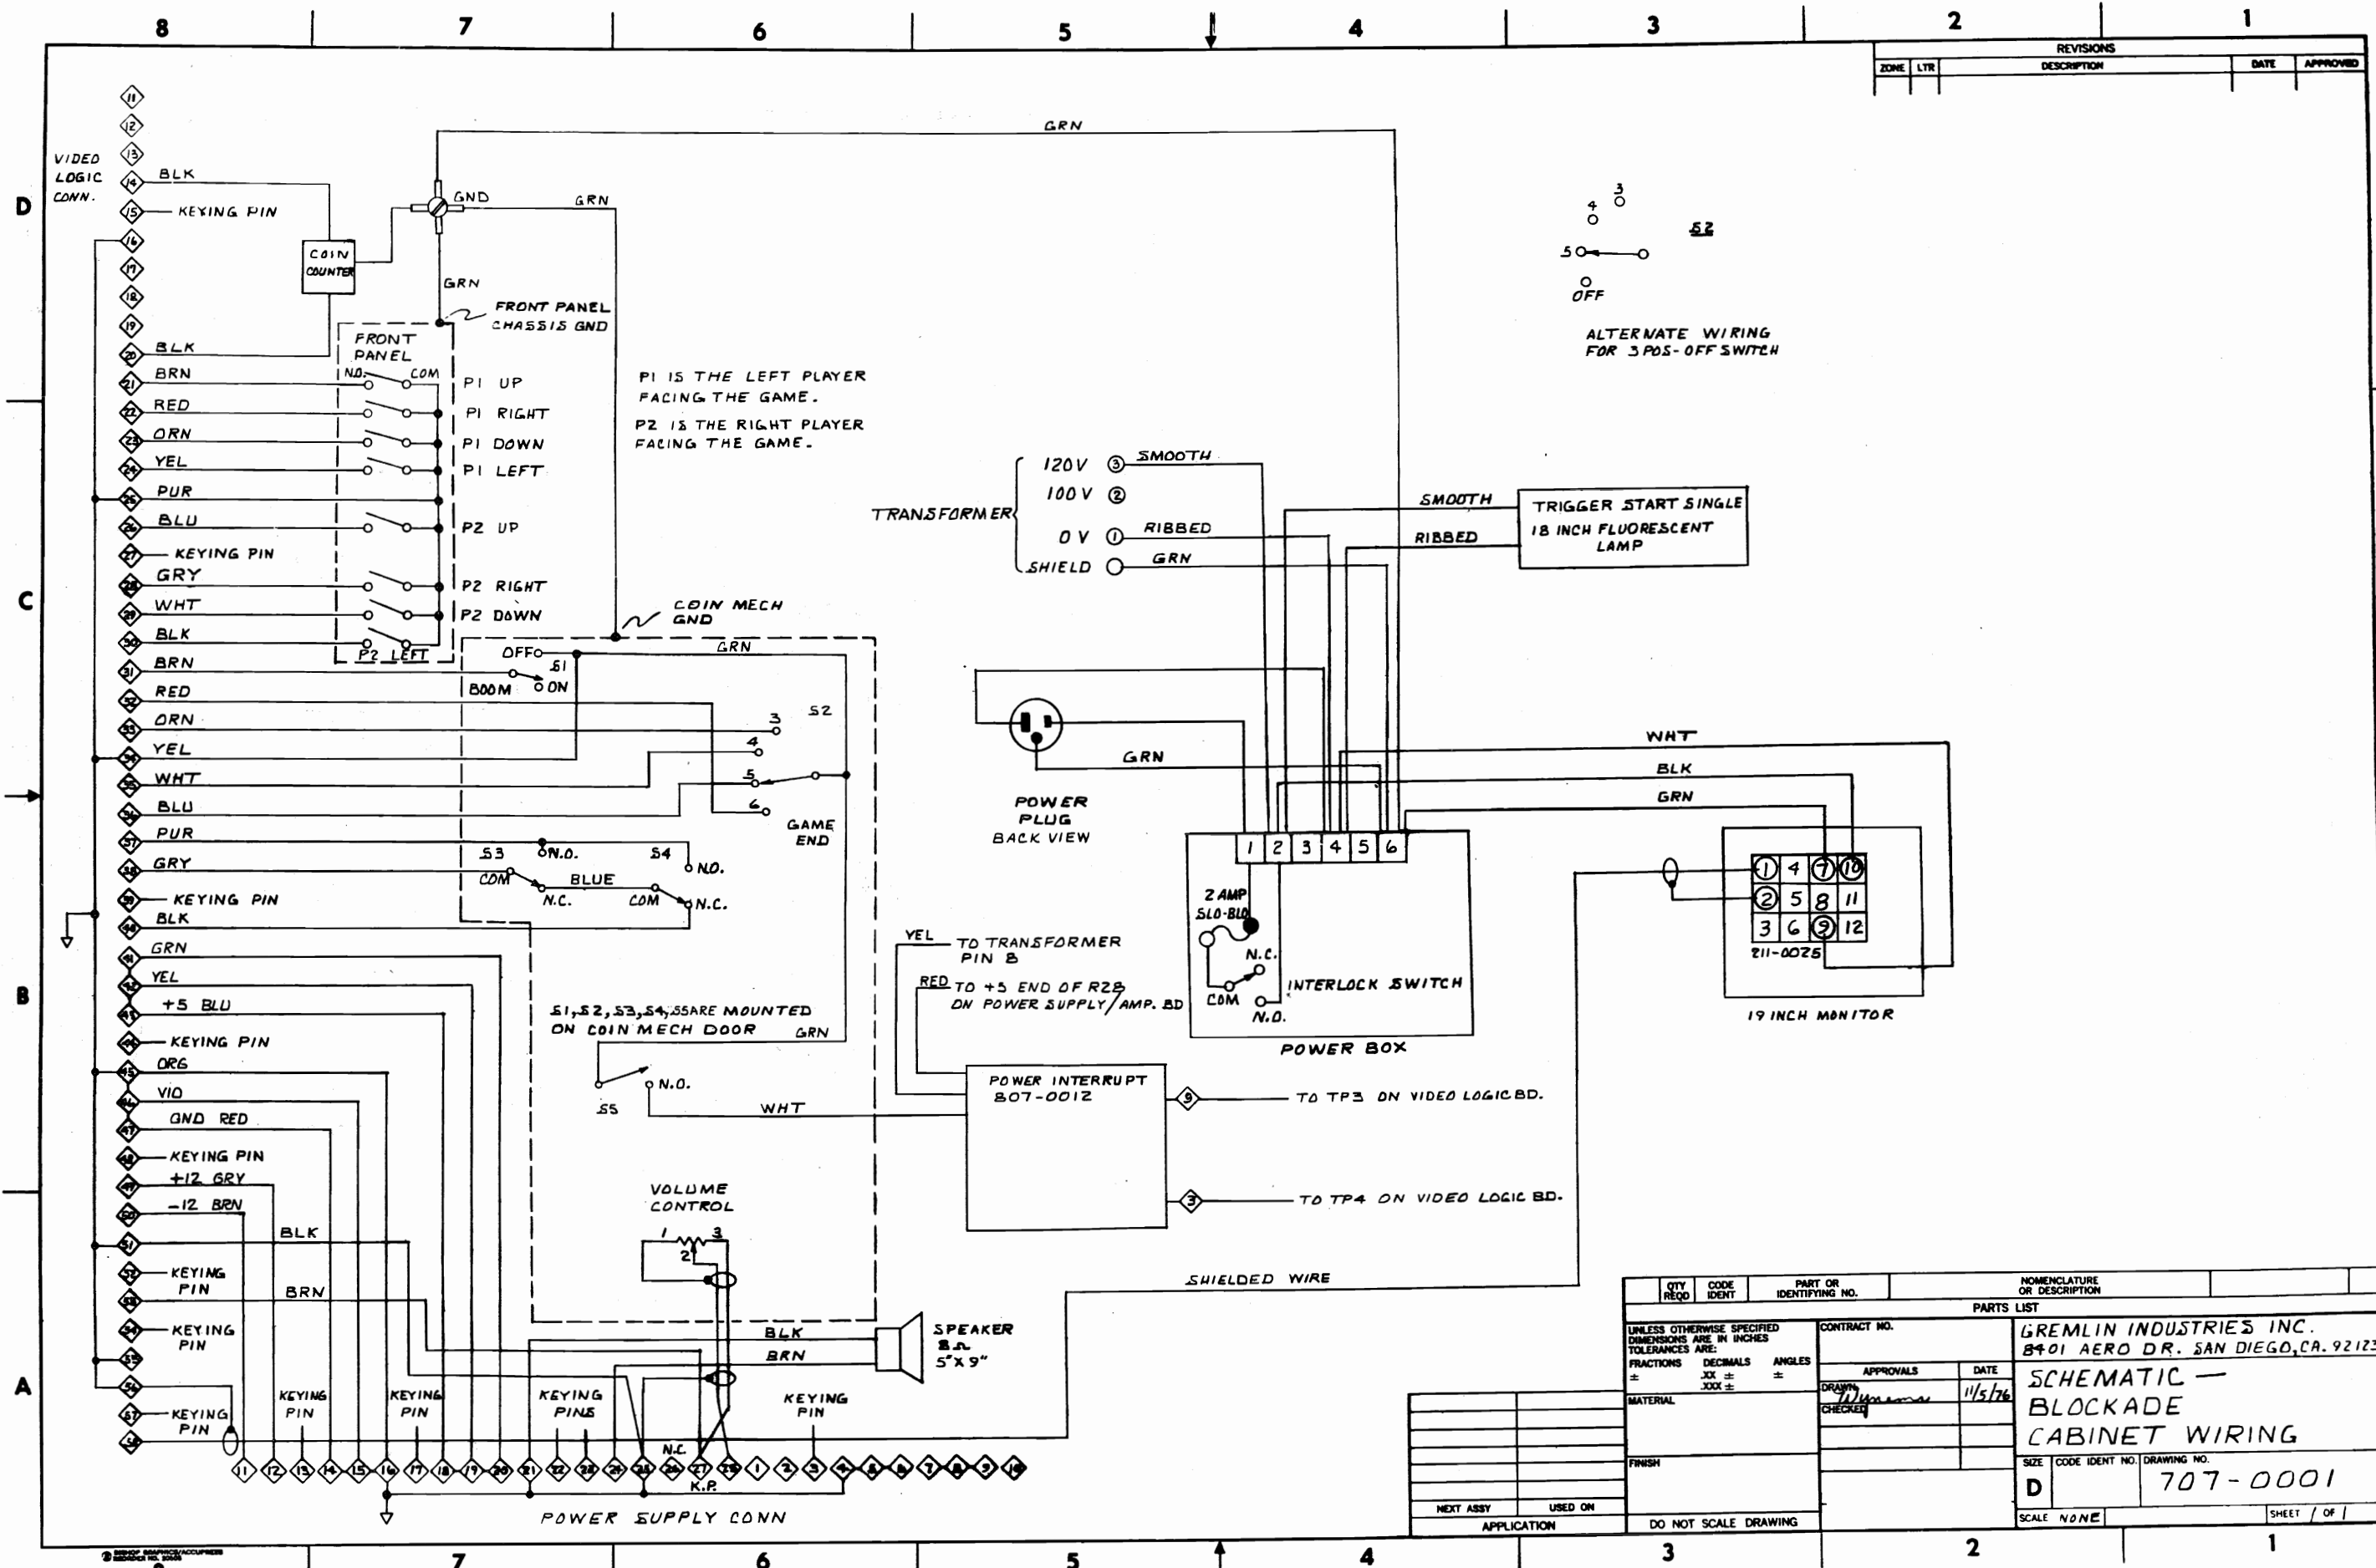


TRIGGER START SINGLE 18 INCH FLUORESCENT LAMP

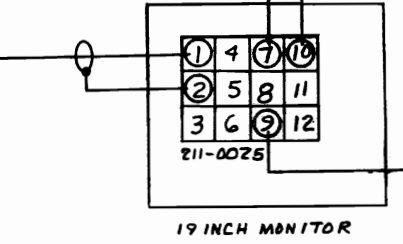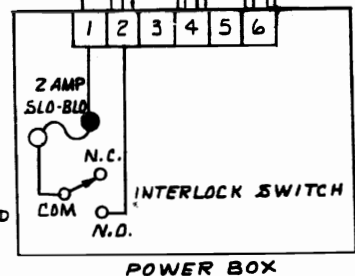

QTY REQD	CODE IDENT	PART OR IDENTIFYING NO.	NOMENCLATURE OR DESCRIPTION
			GREMLIN INDUSTRIES INC. 8401 AERO DR. SAN DIEGO, CA. 92123
			SCHMATIC - BLOCKADE CABINET WIRING
			DATE 11/5/76
			DRAWING CHECKER
			SIZE CODE IDENT NO. DRAWING NO. D 707-0001
			SCALE NONE SHEET / OF 1

707-0001

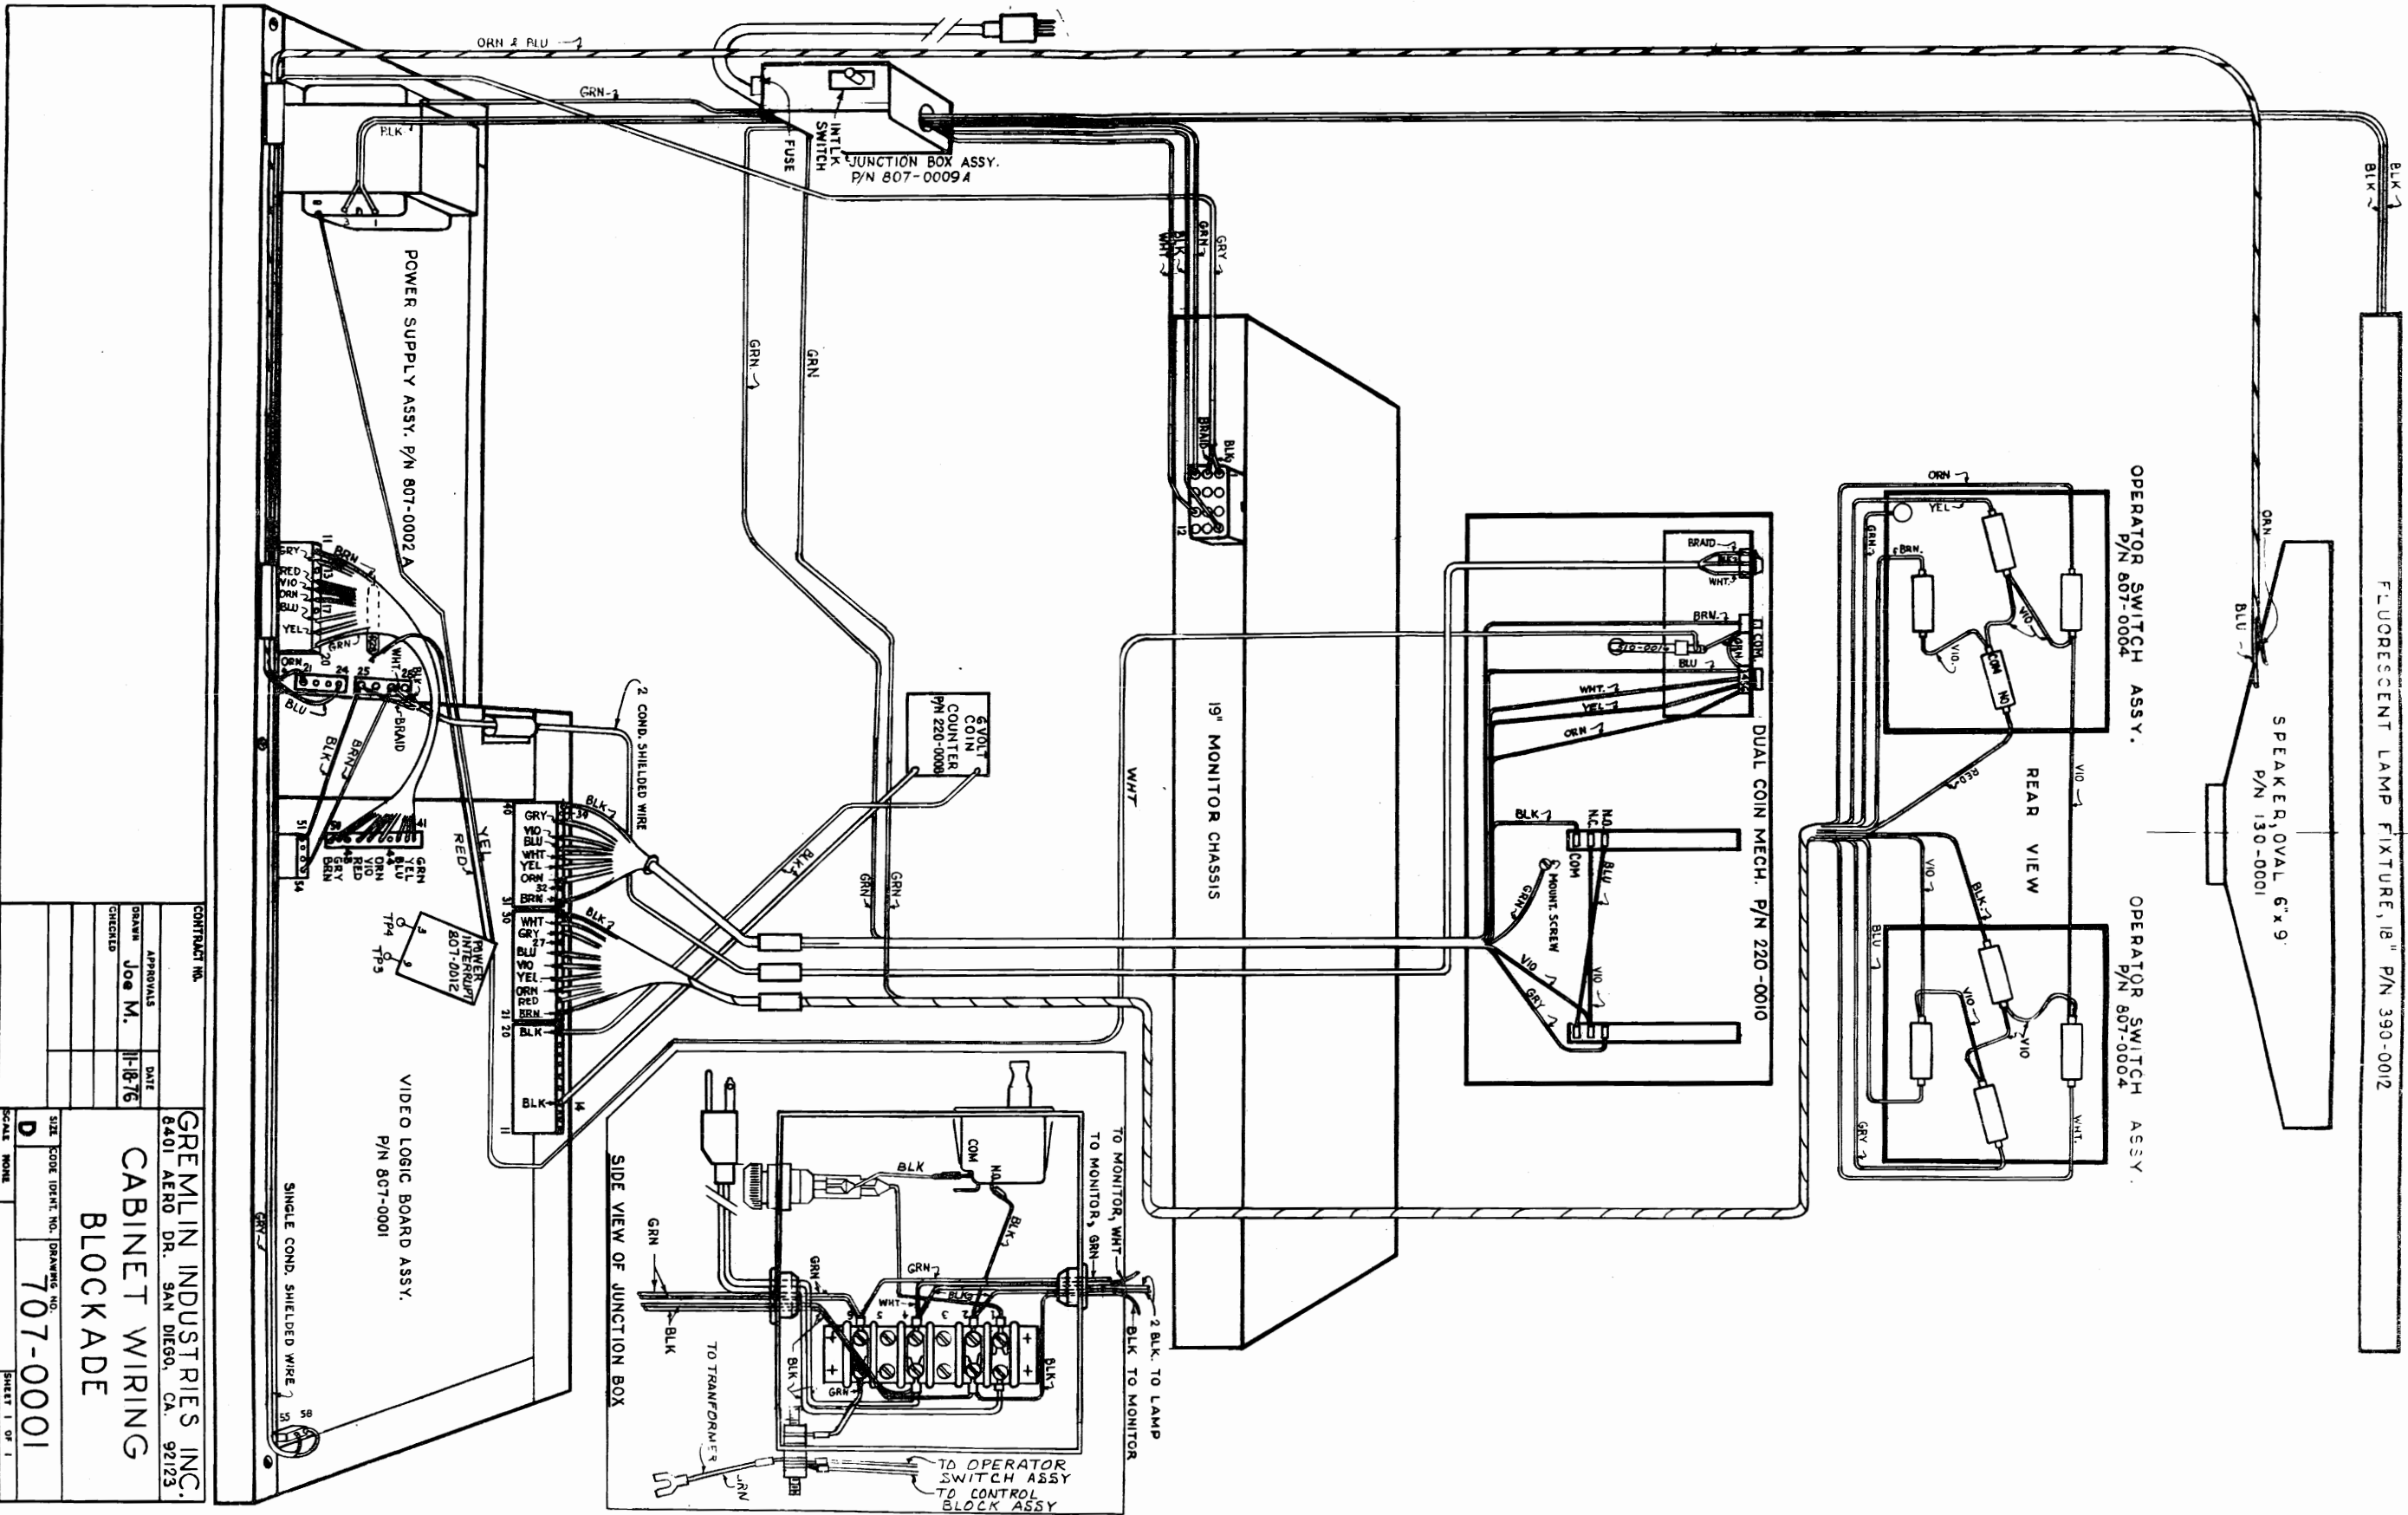

CONTRACT NO.	
APPROVALS	DATE
DRAWN Joe M.	11-18-76
CHECKED	

GREMLIN INDUSTRIES INC.  
 6401 AERO DR. SAN DIEGO, CA. 92123  
**CABINET WIRING**  
**BLOCKADE**  
 SIZE CODE IDENT. NO. DRAWING NO.  
**D** **707-0001**  
 SCALE NONE SHEET 1 OF 1